

Want More Information?

Central Heating New Zealand Ltd
52 Pilkington Way, Christchurch
Ph: 0800 3571233

info@centralheating.co.nz

www.centralheating.co.nz



PDF




FAQ

Rev 1.0




Model: CHRFS

1 CHRFS – LED/button indication

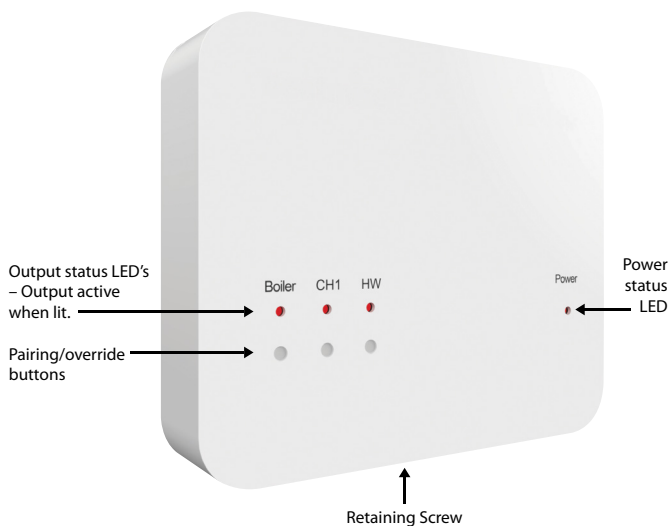

2 Installing the CHRFS

- Using a small screwdriver, slightly loosen the screw located at the base of the CHRFS. You can then carefully separate the front panel from the CHRFS.
- Position the CHRFS back plate on the wall, fixing into place using the screws provided.
- Terminate the cables to the CHRFS as shown in the wiring diagram (section 6).
- Mount the front panel onto the back plate, tighten the retaining screw on the base.
- Switch on the power supply, the power LED will illuminate.

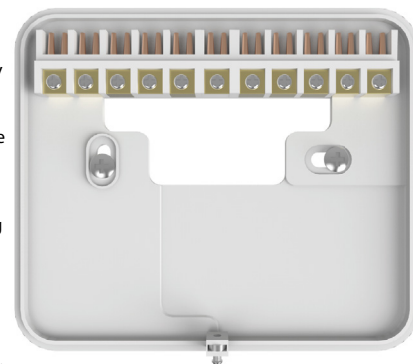

3 Overriding the CHRFS outputs

To override an output on the CHRFS, simply press the override button once, the output & LED will then be activated.

To override the output off, press the button once.

4 Pairing the CHRFS to the UH8-RF

On the CHRFS, press and hold the Boiler pairing button for 5 seconds.

The Boiler status LED will switch on.

Press and release the pairing button on the UH8-RF.

When the CHRFS detects the pairing signal from the UH8-RF, the Boiler LED will switch off.

To pair your wireless thermostat to the CHRFS, please refer to your wireless thermostat instruction manual.

5 Factory Resetting the CHRFS

To reset an output of the CHRFS, follow these steps;

- Press and hold both the Boiler & HW pairing buttons for 5 seconds. The LED's on the CHRFS will now flash.

- Press and release the button of the channel to reset.

For example pressing the CH1 button, will erase all devices paired to The CH1 channel.

Once the LED's have stopped flashing the reset procedure is complete.

6 CHRFS Wiring Diagram

