


FAR 3 Way Valve Instructions

The Far 3 Way valve is easy to fit as follows.

1) Before fitting the actuator, make sure that the markings on the valve body shaft correspond with the position as shown. The symbol on the right of the slot indicates the heating side of the valve.

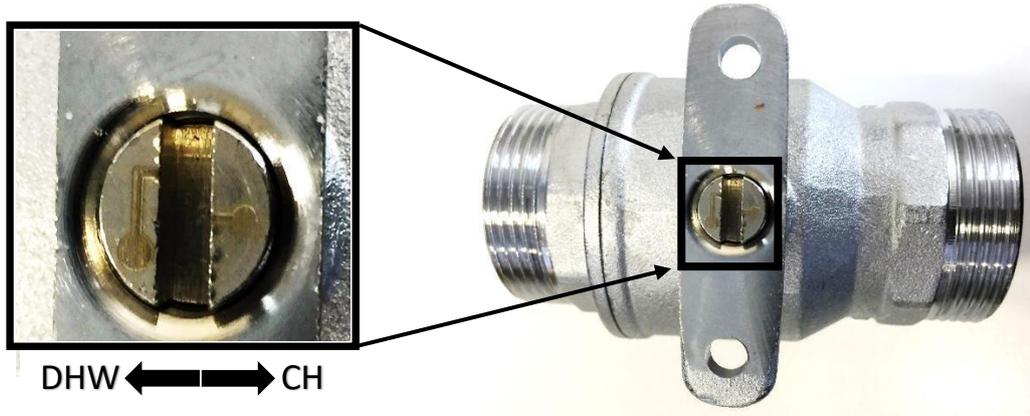

2) The actuator should be in the position shown to allow alignment with the valve body receiver slot. It can go in either orientation as shown.



Internal Terminal Board

1) Grey	2) White	3)	N) Blue	5) Brown	6) Black	7)
---------	----------	----	---------	----------	----------	----

	<u>Wiring</u>		I-KIR2 (Terminal)	BWR (Terminal)
1) Grey	Micro switch common contact	Connected to the common contact of the micro switch.	N/A	N/A
2) White	N/O of the micro switch	Connected to the normally open contact of the micro switch.	N/A	N/A
N) Blue	Neutral	Connection to neutral of the system.	50	9
5) Brown	Phase/Live	Connection to the Phase/Live of the system.	51	13
6) Black	Open	When Live= Valve Open.	52	12
	Closed	Not Live= Valve Closed.		

