

BAXI

POWER HT

IT

Caldaie a terra a gas a condensazione

manuale per l'uso destinato all'utente ed all'installatore

AT

Brennwert- Gaskessel

Gebrauchsanleitung für den Verbraucher und den Installateur

GB

Floor standing condensing gas boilers

Installation, operation and maintenance Manual

CE 0085

Dear Customer,

We are sure your new boiler will comply with all your requirements.

Purchasing one of the **BAXI** products satisfies your expectations: good functioning, simplicity and ease of use.

Do not dispose of this booklet without reading it: this manual contains the information, which will help you to run your boiler correctly and efficiently.

Do not leave any parts of the packaging (plastic bags, polystyrene, etc.) within children's reach as they are a potential source of danger.

BAXI S.p.A. declares that these models of boiler bear the CE mark in compliance with the basic requirements of the following Directives:

- Gas Directive 90/396/EEC
- Efficiency Directive 92/42/EEC
- Electromagnetic Compatibility Directive 2004/108/EEC
- Low Voltage Directive 2006/95/EC



ATTENTION

**This device can only be installed and operate
in permanent, ventilated rooms in accordance with
the Rules in force**



BAXI S.p.A., a leading European manufacturer of hi-tech boilers and heating systems, has developed CSQ-certified quality management (ISO 9001), environmental (ISO 14001) and health and safety (OHSAS 18001) systems. This means that BAXI S.p.A. includes among its objectives the safeguard of the environment, the reliability and quality of its products, and the health and safety of its employees.
Through its organisation, the company is constantly committed to implementing and improving these aspects in favour of customer satisfaction.



CONTENTS

INSTRUCTIONS PERTAINING TO THE USER

1. Instructions prior to installation	76
2. Instructions prior to commissioning	76
3. Commissioning of the boiler	77
4. Filling the boiler	84
5. Switching the boiler off	84
6. Prolonged standstill of the system. Frost protection	84
7. Servicing instructions and gas change	84

INSTRUCTIONS PERTAINING TO THE INSTALLER

8. General information	85
9. Instructions prior to installation	85
10. Boiler installation and dimensions	86
11. Chimney flue connection	89
12. Connecting the mains supply	91
13. Adjusting the gas valves and gas change	98
14. Setting the boiler parameters	102
15. Control and operation devices	103
16. Positioning of the ignition and flame sensing electrode	104
17. Check of combustion parameters	104
18. Activating the flue-sweeper function	105
19. Annual service	105
20. Boiler schematic	106
21. Illustrated wiring diagram	107-108
22. Technical data	109

1. INSTRUCTIONS PRIOR TO INSTALLATION

This boiler is designed to heat water at a lower than boiling temperature at atmospheric pressure. The boiler must be connected to a central heating system and/or to a domestic hot water supply system in compliance with its performances and output power.

The boiler must be installed by a Qualified Service Engineer and ensure the following operations are carried out:

- a) check that the boiler is fit for operation with the type of gas available. For more details see the notice on the packaging and the label on the appliance itself.
- b) careful checking that the flue terminal draft is appropriate; that the terminal is not obstructed and that no other appliance exhaust gases are expelled through the same flue duct, unless the flue is especially designed to collect the exhaust gas coming from more than one appliance, in conformity with the standards and regulations in force.
- c) careful checking that, in case the flue has been connected to pre-existing flue ducts, thorough cleaning has been carried out in that residual combustion products may come off during operation of the boiler and obstruct the flue duct.
- d) to ensure correct operation of the appliance and avoid invalidating the guarantee, observe the following precautions:

1. Heating circuit

1.1. new system

Before proceeding with installation of the boiler, the system must be cleaned and flushed out thoroughly to eliminate residual thread-cutting swarf, solder and solvents if any, using suitable proprietary products.

To avoid damaging metal, plastic and rubber parts, use only neutral cleaners, i.e. non-acid and non-alkaline. The recommended products for cleaning are:

SENTINEL X300 or X400 and FERNOX heating circuit restore. To use this product proceeding strictly in accordance with the maker's directions.

1.2. existing system

Before proceeding with installation of the boiler, the system must be cleaned and flushed out to remove sludge and contaminants, using suitable proprietary products as described in section 1.1.

To avoid damaging metal, plastic and rubber parts, use only neutral cleaners, i.e. non-acid and non-alkaline such as SENTINEL X100 and FERNOX heating circuit protective. To use this product proceeding strictly in accordance with the maker's directions.

Remember that the presence of foreign matter in the heating system can adversely affect the operation of the boiler (e.g. overheating and noisy operation of the heat exchanger).

Failure to observe the above will render the guarantee null and void.

2. INSTRUCTIONS PRIOR TO COMMISSIONING

Initial lighting of the boiler must be carried out by a qualified service engineer. Ensure the following operations are carried out:

- a) compliance of boiler parameters with (electricity, water, gas) supply systems settings.
- b) compliance of installation with the standards and regulations in force.
- c) appropriate connection to the power supply and earthing of the appliance.

Failure to observe the above will render the guarantee null and void.

The instructions shall state the substance of the following:


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

3. COMMISSIONING OF THE BOILER

To correctly light the burner proceed as follows:

- 1) provide power supply to the boiler;
- 2) open the gas cock;
- 3) follow the directions given below regarding the adjustments to be made at the boiler control panel.

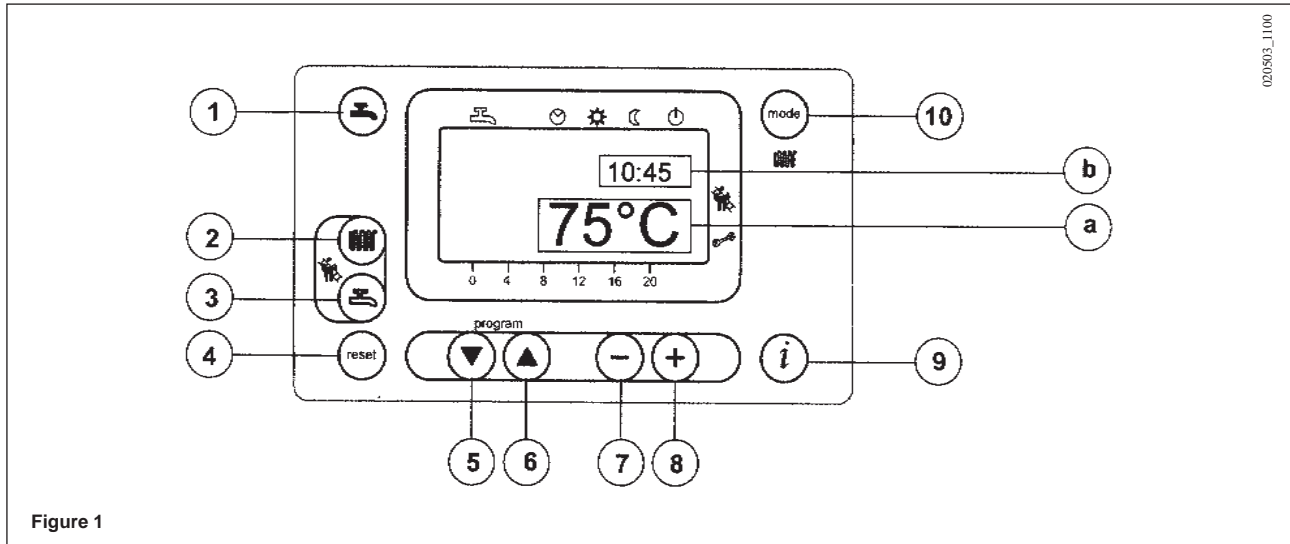

IMPORTANT: Domestic Hot Water (D.H.W.) instructions here described, are to take in account only if the boiler is connected to a D.H.W. production system.

KEYS

- Domestic hot water on/off key
- Central heating water temperature setting key
- Domestic hot water temperature setting key
- Reset key
- Program access and scroll keys
- Program access and scroll key
- Parameter setting key (decrease value)
- Parameter setting key (increase value)
- Data display reset key
- Central heating mode setting key

DISPLAY SYMBOLS

- Operation in domestic hot water mode
 - Operation in central heating mode
 - Operation in automatic mode
 - Operation in manual mode at the maximum temperature set
 - Operation in manual mode at minimum temperature
 - Standby (off)
 - Outdoor temperature
 - Flame present (on)
 - Resettable alarm warning
- a) MAIN display**
b) SECONDARY display

3.1 DESCRIPTION OF KEYS




(2) Central heating water temperature setting key. This key can be pressed to set the central heating water output temperature as described in point 3-3.



(3) Domestic hot water temperature setting key. This key can be pressed to set the domestic hot water temperature as described in point 3-4.



(10) Central heating mode operating key

The  key can be pressed to activate four boiler central heating operating modes; these modes are identified by a black cursor line underneath the relative symbol on the display, and are as follows:







 


Figure 2

-  **Automatic operation.** Operation of the boiler is controlled by the timed program as described in point 3-5.1 “Daily timed program for operation of the central heating system”;
-  **Manual operation at the maximum temperature set.** The boiler comes into operation regardless of the timed program set. The operating temperature is that set using the  key (point 3-3: “Setting the maximum central heating temperature”);
-  **Manual operation at minimum temperature.** The operating temperature is that set in point 3-6: “setting the minimum central heating temperature”.
-  **standby.** The boiler does not work in central heating mode, although the antifreeze function is still enabled.

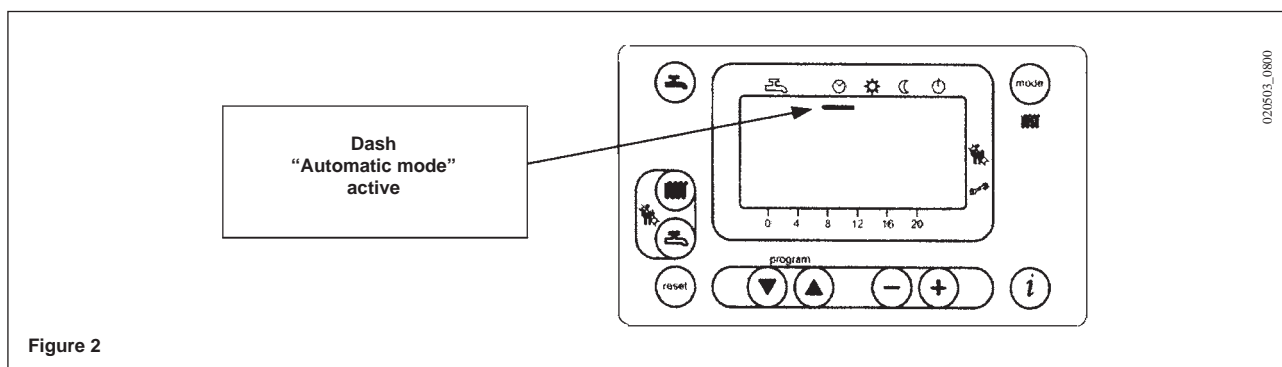

 
 
(1) Domestic hot water on/off key: This key can be pressed to activate or deactivate this function, which is identified on the display by a black cursor line under the symbol .





(4) Reset key. In case of a fault, referred to in point 3-7 “Faults and resetting the boiler”, the boiler can be restarted by pressing this key for at least two seconds.
If this key is pressed with no fault present, the display will show the message “E153”, and the same key has to be pressed again (for at least two seconds) to restart the boiler.






(9) Data key. This key can be pressed repeatedly to display the following information:






- Temperature (°C) of the domestic hot water ();
- outdoor temperature (°C) (); only provided with the outdoor temperature sensor probe connected.

Press either of the   keys to return to the main menu.

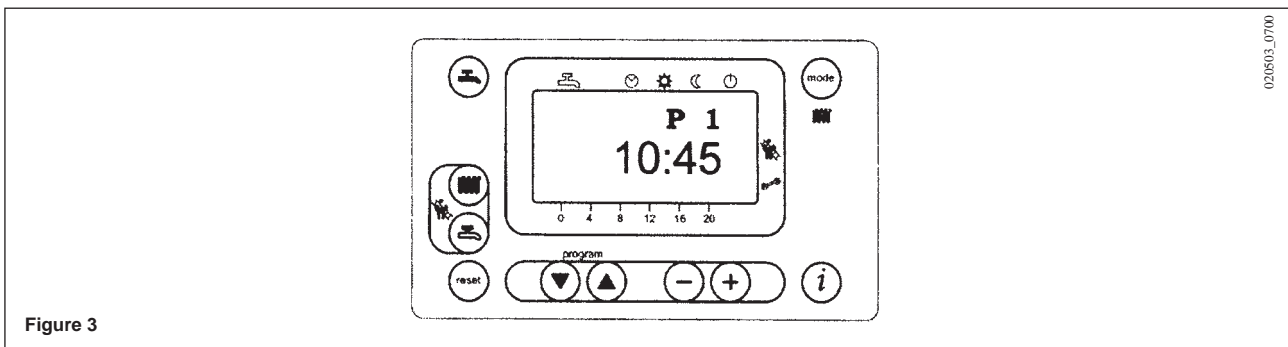




3.2 SETTING THE TIME



 
- Press either of the   keys to access the programming function; the display will show the letter P followed by a number (program line);








 - press the   keys until the display shows P1, referring to the time to be set;
- press the   keys to set the time; on the display, the letter P will start to flash;
- press the  key to save and exit the programming function;

3.3 SETTING THE MAXIMUM CENTRAL HEATING TEMPERATURE

 - Press the  key (2-figure 1) to set the central heating water temperature;
- Press the   keys to set the temperature required;
- press either of the   keys (1 or 10 - figure 1) to save and return to the main menu.







N.b – With the outdoor sensor connected, the  key (2 - figure 1) can be used to shift the central heating curve.
Press the   keys to decrease or increase the room temperature in the premises to be heated.

3.4 SETTING THE MAXIMUM DOMESTIC HOT WATER TEMPERATURE

- Press the  key (3-figure 1) to set the maximum domestic hot water temperature;
- Press the   keys to set the temperature required;
- press either of the   keys (1 or 10 - figure 1) to save and return to the main menu.

3.5 SETTING THE DAILY PROGRAM FOR OPERATION IN CENTRAL HEATING AND DOMESTIC HOT WATER MODES





3.5.1 Setting the daily times for central heating mode operation


- Press either of the   keys to access the programming function;
 - a) press these keys until the display shows P11, referring to the program start time;
 - b) press the   keys to set the time;
- press the  key; the display will show P12, referring to the program end time;
- repeat the operations described in points a and b until the third and last cycle is reached (program line P16);
- press the  key to save and exit from the programming function.

3.5.2 Setting the daily times for domestic hot water mode operation

- Factory setting of D.H.W. function is enable (ON) while is disabled D.H.W. daily times program. To enable D.H.W. daily times program see section 14 (parameter H91).
Setting the daily times for domestic hot water mode operation-Carry out the operations described in section 3.5.1 for program lines 31 to 36.

 

3.6 SETTING THE MINIMUM CENTRAL HEATING TEMPERATURE

- press either of the   keys to access the programming function;
- press these keys until the display shows P5, referring to the temperature to be set;
- press the   keys to set the temperature required.

This operating mode is enabled when minimum temperature central heating mode  is activated or when the daily central heating program does not require heat.

N.B – With the outdoor sensor connected, parameter P5 can be used to set the minimum room temperature in the premises to be heated.


3.7 TABLE FO USER-SETTABLE PARAMETERS


Parameter N.	Parameter description	Factory setting	Range
P1	Time of day setting	— — — —	0...23:59
P5	Minimum central heating temperature setting (°C)	25	25..80
P11	Start of first daily period of automatic central heating	6:00	00:00...24:00
P12	End of first daily period of automatic central heating	22:00	00:00...24:00
P13	Start of second daily period of automatic central heating	0:00	00:00...24:00
P14	End of second daily period of automatic central heating	0:00	00:00...24:00
P15	Start of third daily period of automatic heating	0:00	00:00...24:00
P16	End of third daily period of automatic central heating	0:00	00:00...24:00
* P31	Start of first daily period of domestic hot water production	0:00	00:00...24:00
* P32	End of first daily period of domestic hot water production	24:00	00:00...24:00
* P33	Start of second daily period of domestic hot water production	0:00	00:00...24:00
* P34	End of second daily period of domestic hot water production	0:00	00:00...24:00
* P35	Start of third daily period of domestic hot water production	0:00	00:00...24:00
* P36	Fine End of third daily period of domestic hot water production	0:00	00:00...24:00
P45	Reset of daily central heating and domestic hot water production programs (factory settings). Press the - + keys together for about 3 seconds; the number 1 appears on the display. Confirm by pressing either of the   keys	0	0...1

* Parameters for program lines P31 to P36 are displayed only if Domestic Hot Water (D.H.W.) program (parameter H91 see section 14) is activated.

3.8 FAULT WARNINGS AND RESETTING THE BOILER

If a fault occurs, a flashing warning code appears on the display.

The fault warnings appear on the main display (figure 1 a) together with the  symbol (Figure 4).

To reset, press the reset  button for at least two seconds.

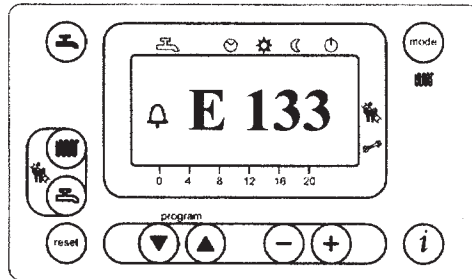


Figure 4

Fault warnings appear on the secondary display (figure 1 b) alternating with the time, both of them flashing (figure 4.1). It is not possible to reset malfunction warnings which appear on the secondary display as the cause of the alarm has first to be removed.

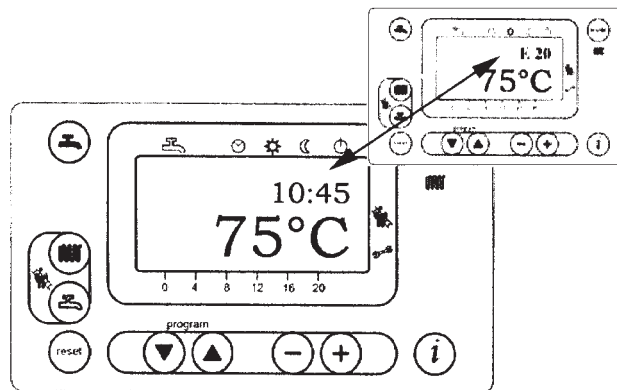




Figure 4.1

3.9 TABLE OF FAULTS AND ERROR MESSAGES

Error code	Description of fault	Corrective action
E10	Outdoor temperature sensor fault	Call an authorised service centre.
E20	ntc output sensor failure	Call an authorised service centre.
E50	domestic hot water ntc sensor failure	Call an authorised service centre.
E110	safety or flue gas thermostat tripped	Press the reset key (for about 2 seconds: if this device is triggered repeatedly, call the authorised service centre)
E128	Loss of flame during operation (the ionization current has fallen below the limit)	Call an authorised service centre.
E129	Minimum fan speed limit is hurt	Call an authorised service centre.
E132	floor thermostat tripped	Call an authorised service centre.
E133	no gas	Press the reset key (for about 2 seconds); if the fault persists, call the authorised service centre)
E151	boiler circuit board error	If  symbol is displayed, press the reset  button otherwise switch off the electricity supply to the boiler for at least 10 seconds; if the fault persists, call the authorised service centre. Check the positioning of the ignition and flame sensing electrode (see section 16).
E153	the reset key has been pressed inappropriately	Press the key again (about 2 seconds)
E154	internal error on boiler circuit module	Press and hold reset button (2 seconds approx.) then press again when warning E153 appears
E160	fan speed threshold not reached	Call an authorised service centre.
E164	no hydraulic differential pressure switch enabling signal	Check that the system is at the rated pressure. (refer to the section on filling the system). if the fault persists, call the authorised service centre.

All the faults are displayed in order of importance; if several faults occur simultaneously, the first to be displayed is the one with highest priority. After the cause of the first fault has been removed, the second one will be displayed, and so on.

If any given fault occurs frequently, contact the authorised Service Centre.

4. FILLING THE SYSTEM

IMPORTANT: Regularly check that the pressure gauge (1 - figure 17) reads out a pressure of **1 - 1.5** bar when the central heating system is cold. Open the boiler drain cock (16 - figure 17) to reduce pressure if it is too high. Open the filling cock to increase pressure if it too low.

Always open the filling cock very slowly to allow any air to bleed off.

If the pressure in the system drops frequently, contact an authorised service centre to have the system checked.

N.B.: Take special care when filling the heating system. In particular, open any thermostat valves in the system, ensure the water enters slowly in order to prevent the formation of air inside the primary circuit until operating pressure is reached. Lastly, vent any radiators in the system. **BAXI** declines all liability for damage deriving from the presence of air bubbles in the primary exchanger due to the incorrect or imprecise observance of the above.

5. SWITCHING THE BOILER OFF

To shut down the boiler switch off the electrical supply to the appliance.

6. PROLONGED STANDSTILL OF THE SYSTEM. FROST PROTECTION

We recommend you avoid draining the whole system as water replacements engender purposeless and harmful limestone deposits inside the boiler and on the heating elements.

In case the boiler is not operated during wintertime and is therefore exposed to danger of frost we suggest you add some specific-purpose anti-freeze to the water contained in the system (e.g.: propylene glycole coupled with corrosion and scaling inhibitors).

The electronic management of boilers includes a "frost protection" function in the central heating system which operates the burner to reach a heating flow temperature of 30° C when the system heating flow temperature drops below 5°C.

The frost protection function is enabled if:

- * electrical supply to the boiler is on;
- * the gas service cock is open;
- * the system pressure is as required;
- * the boiler is not blocked.

7. SERVICING INSTRUCTIONS AND GAS CHANGE

To maintain efficient and safe operation of your boiler have it checked by a Qualified Service Engineer at the end of every operating period.

Careful servicing will ensure economical operation of the system.

Do not clean the outer casing of the appliance with abrasive, aggressive and/or easily flammable cleaners (i.e.: gasoline, alcohol, and so on). Always isolate the electrical supply to the appliance before cleaning it (see section 5 Turning off the boiler).

***These boilers produced for natural gas can be converted to work with LPG.
Any gas change be effected by a Qualified Service Engineer.***

8. GENERAL INFORMATION

The following remarks and instructions are addressed to Service Engineers to help them carry out a faultless installation. Instructions regarding lighting and operation of the boiler are contained in the 'Instructions pertaining to the user' section.

Note that installation, maintenance and operation of the gas appliances must be performed exclusively by qualified personnel in compliance with current standards.

Please note the following:

- Install the boiler in a permanent ventilated central heating boiler room.
- This boiler can be connected to any type of convector plates, radiators, thermoconvectors. Design the system sections as usual though taking into account the available output / pump head performances.
- Do not leave any packaging components (plastic bags, polystyrene, etc.) within children's reach as they are a potential source of danger.
- Initial lighting of the boiler must be effected by a Qualified Service Engineer.
- Make sure that the room where the boiler is installed has a sufficient supply of air to ensure complete combustion of the gas consumed by the appliance. Install unblockable ventilation grilles as necessary in accordance with the Rules in force.
- Connect the boiler directly to an efficient flue to vent all fumes and combustion gases outdoors. Make sure that the pipe connecting the boiler to the flue is not smaller in diameter than the boiler's flue outlet. Make sure that the flue is in good condition and free from holes or cracks that could reduce draw.

Failure to observe the above will render the guarantee null and void.

9. INSTRUCTIONS PRIOR TO INSTALLATION

This boiler is designed to heat water at a lower than boiling temperature at atmospheric pressure. The boiler must be connected to a central heating system and to a domestic hot water supply system in compliance with its performances and output power.

IMPORTANT! The following components are not installed in the boiler as supplied. It is the installer's responsibility to provide them:

- **Expansion vessel;**
- **Pressure safety valve;**
- **Circulation pump;**
- **Filling system cock.**

Before connecting the boiler have the following operations effected:

- a) careful checking that the boiler is fit for operation with the type of gas available. For more details see the notice on the packaging and the label on the appliance itself.
- b) careful checking that the flue terminal draft is appropriate; that the terminal is not obstructed and that no other appliance exhaust gases are expelled through the same flue duct, unless the flue is especially designed to collect the exhaust gas coming from more than one appliance, in conformity with the standards and regulations in force.
- c) careful checking that, in case the flue has been connected to pre-existing flue ducts, thorough cleaning has been carried out in that residual combustion products may come off during operation of the boiler and obstruct the flue duct.

To ensure correct operation of the appliance and avoid invalidating the guarantee, observe the following precautions:

1. Heating circuit

1.1. new system

Before proceeding with installation of the boiler, the system must be cleaned and flushed out thoroughly to eliminate residual thread-cutting swarf, solder and solvents if any, using suitable proprietary products.

To avoid damaging metal, plastic and rubber parts, use only neutral cleaners, i.e. non-acid and non alkaline. The recommended products for cleaning are:

SENTINEL X300 or X400 and FERNOX heating circuit restore. To use this product proceeding strictly in accordance with the maker's directions.

1.2. existing system

Before proceeding with installation of the boiler, the system must be cleaned and flushed out to remove sludge and contaminants, using suitable proprietary products as described in section 1.1.

To avoid damaging metal, plastic and rubber parts, use only neutral cleaners, i.e. non-acid and non-alkaline such as SENTINEL X100 and FERNOX heating circuit protective. To use this product proceeding strictly in accordance with the maker's directions.

Remember that the presence of foreign matter in the heating system can adversely affect the operation of the boiler (e.g. overheating and noisy operation of the heat exchanger).

Failure to observe the above will render the guarantee null and void.

10. BOILER INSTALLATION AND DIMENSIONS

Install the boiler in a position that ensures easy maintenance. You must be able to fully open the front access door and have adequate access to the rear of the boiler.

If possible, install the boiler on a raised base of 200 mm in height to facilitate drainage of flue condensate.

When calculating the weight of the boiler on the floor, bear in mind the weight of the water in the heat exchanger (see table 1).

Adjust the levelling feet to compensate for any unevenness in the floor.

Install the necessary utility connections starting from the water and gas connections on the rear of the boiler (see table 1 for fitting type and size).

The following steps are strongly recommended:

- Install two shut-off valves, one on the heating circuit delivery pipe (MR) and the other on the return pipe (RR) so that you can service the boiler without having to drain the entire heating system.
- Use a metal pipe to connect the boiler's gas connection to the gas supply point, and fit a (mandatory) shut-off valve upstream from the boiler.
- Fit three-part joints in the water and gas connections to and from the boiler to separate it mechanically from utility supplies.
- Fit a water separator (header).
- Install an automatic water filling system to keep the heating circuit full.


These appliances do not have any circulation pump, expansion tank or safety valve. These devices must therefore be provided elsewhere in the system, and must be sized to suit the system's thermal capacity.


N.B.: Take special care when filling the heating system. In particular, open any thermostat valves in the system, ensure the water enters slowly in order to prevent the formation of air inside the primary circuit until operating pressure is reached. Lastly, vent any radiators in the system. **BAXI** declines all liability for damage deriving from the presence of air bubbles in the primary exchanger due to the incorrect or imprecise observance of the above.

Connect the flue condensate drain pipe to a suitable water drain, ensuring an adequate slope.
To drain the boiler, use the drain tap at the rear.

Model POWER HT..	Depth (mm) Ⓐ	Height (mm)	Wight (mm)	Gas fitting	Fitting MR (CH)	Fitting RR (CH)	Water contents (l)
1.850	801	850	450	G 3/4"	G 1"	G 1"	13,7
1.1000	871	850	450	G 1"	G 1 1/4"	G 1 1/4"	21
1.1200	1024	850	450	G 1"	G 1 1/4"	G 1 1/4"	23,3
1.1500	1132	850	450	G 1"	G 1 1/4"	G 1 1/4"	25,3

Table 1

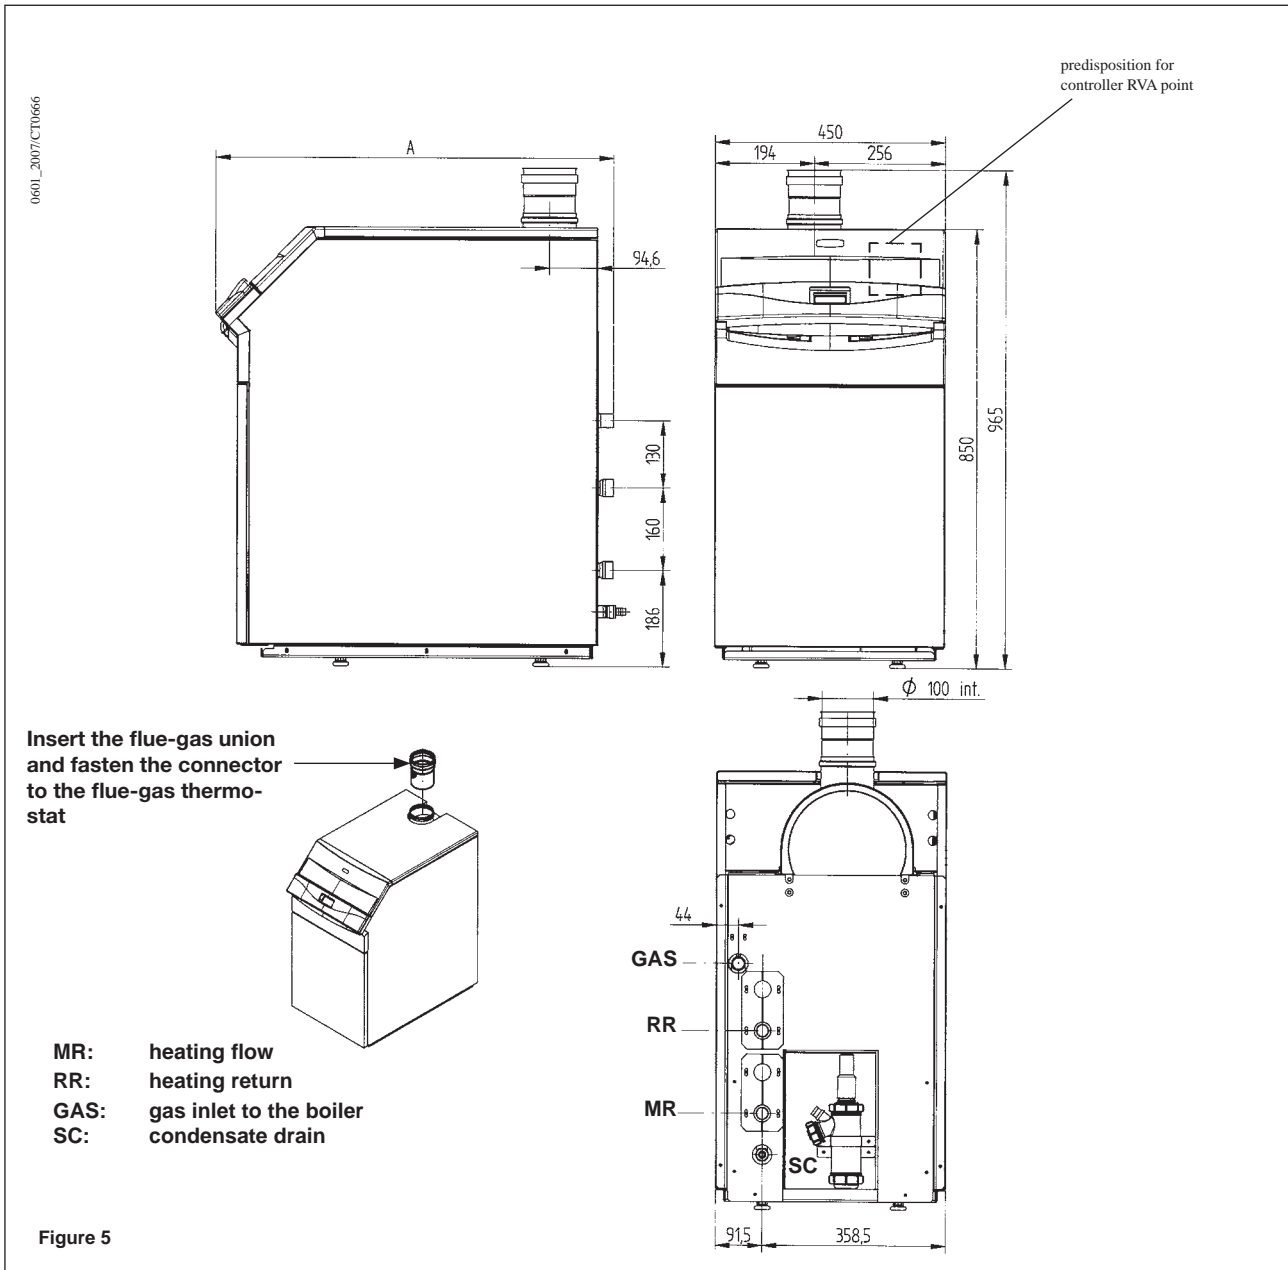


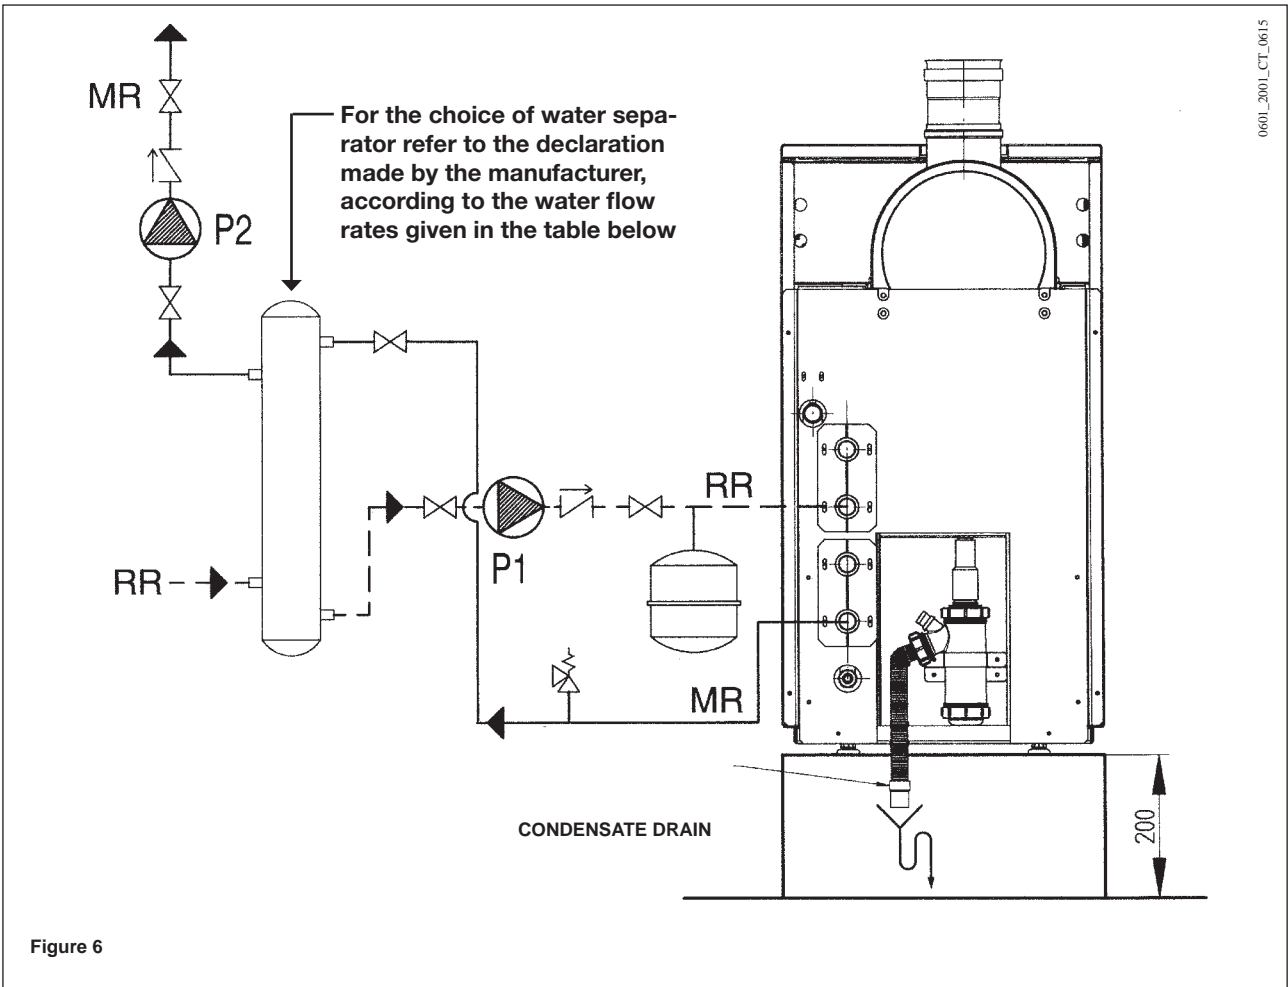


10.1 BOILER PRESSURE LOSS

POWER HT Model	Minimum water flow rate l/h	Water flow rate with $\Delta t=20^{\circ}\text{K}$ l/h
1.850	1900	3700
1.1000	2100	4300
1.1200	2600	5200
1.1500	3300	6500

Check that the water flow rate is no lower than as stated

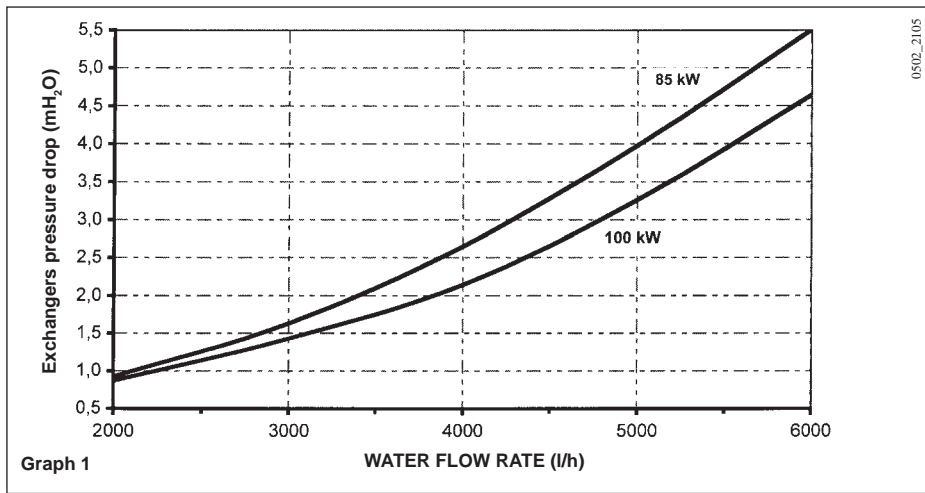

**POWER HT
1.850 - 1.1000
EXCHANGERS
PRESSURE DROP.**

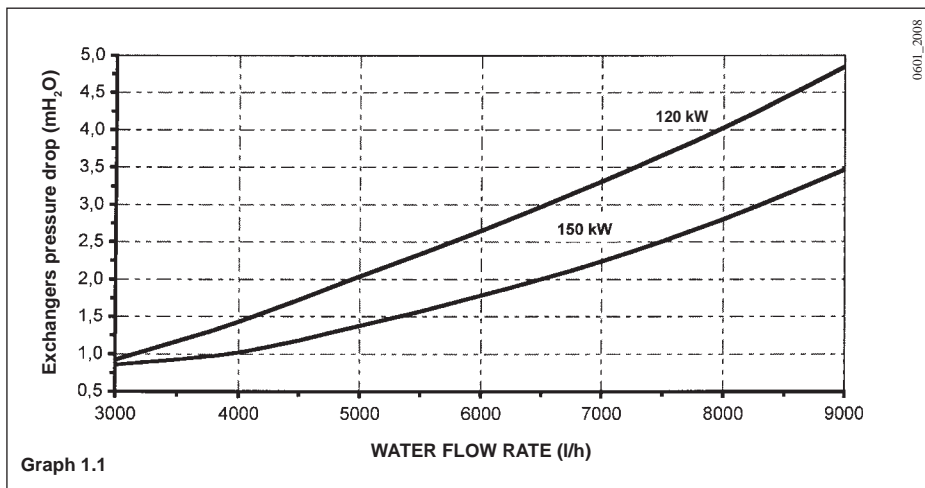

**POWER HT
1.1200 - 1.1500
EXCHANGERS
PRESSURE DROP.**

11. CHIMNEY FLUE CONNECTION

Connect the boiler to the flue using a pipe made of stainless steel or plastic material with an internal diameter of 100 mm, capable of resisting normal mechanical stresses over time, as well as high temperatures (<120°C) and the chemical effects of fuel gases and their condensates.

Insert the flue-gas union and fasten the connector to the flue-gas thermostat before hooking up to the flue.

Whenever possible use a flue connection that can be disconnected for maintenance.

Important! Horizontal flue sections must have a minimum slope of 3° towards the boiler.

Flue accessories made of plastic material for cascade or single installations are available (diameter 110 mm)

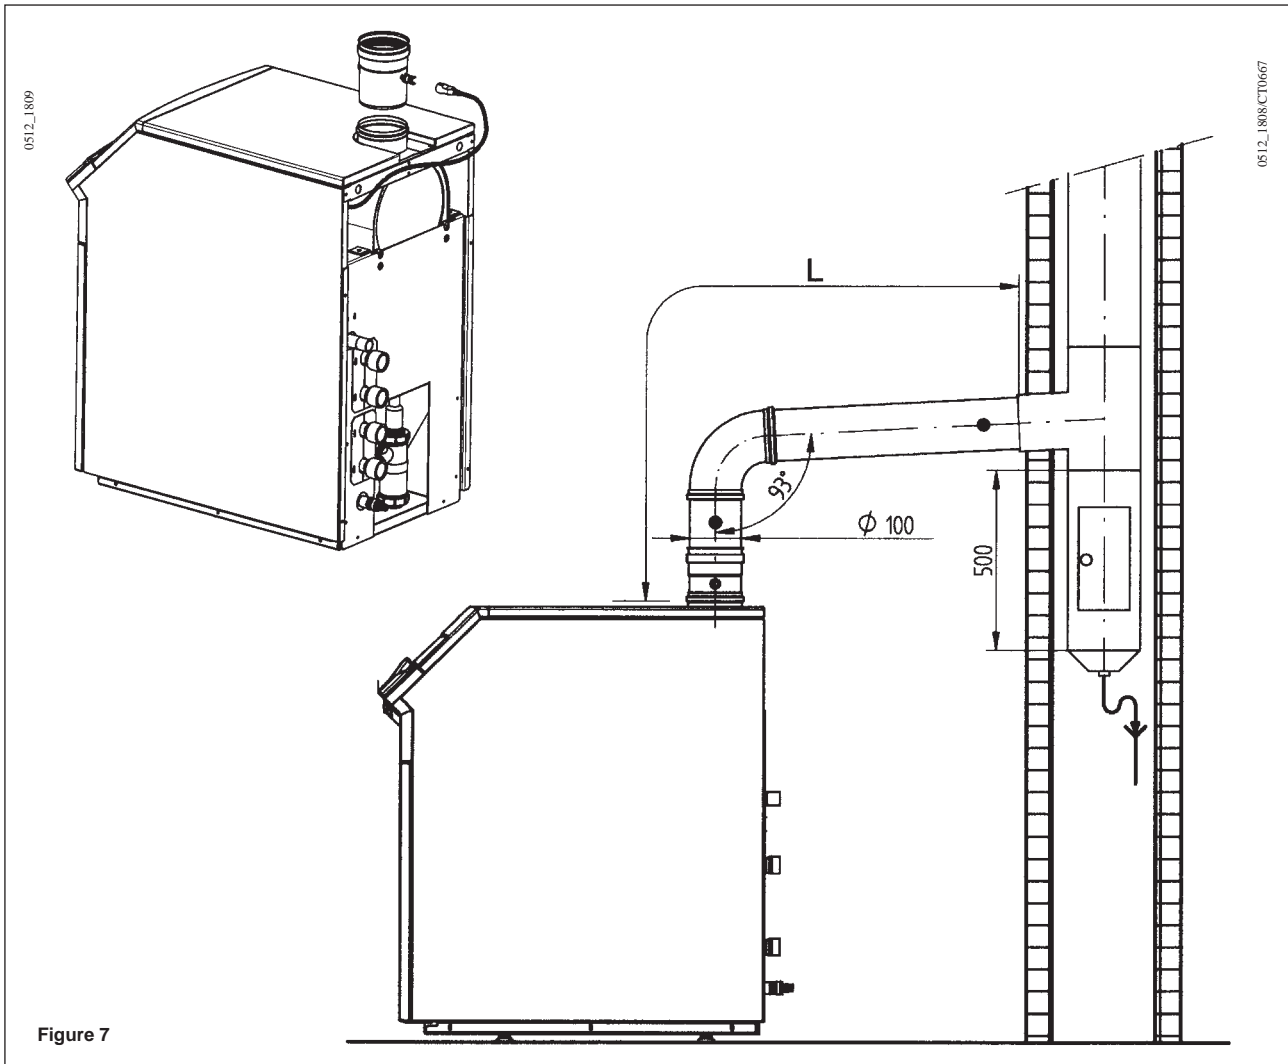


Figure 7

In case exhaust and intake flues not supplied by BAXI S.p.A. have been installed, these must be certified for the type of use and must have a maximum pressure drop in accordance with the values reported in the table.

To ensure the correct rated heat input to the maximum and minimum heat input, it is necessary to update the speed (rpm) of the fan, it depends on the length of the pipes, in accordance with the installation of flue and air pipes as indicated in the tables below.

The factory-set value is referred to the minimum length of flue pipe (0÷10 m). To carry such updating, changing the speed of the fan at the (rpm and pwm%), refer to par. 13÷14.

Max. length of flue duct (L) : **20 m**

Each 90° bend reduces the duct max. length by : **1 m**

Each 45° bend reduces the duct max. length by : **0,5 m**

TABLE FUMES PRESSURE AVAILABLE

	ΔP available flue duct B23 Ø 100	Cascade solution	
		ΔP available with single Clapet Ø 110/110	ΔP available with double Clapet Ø 110/110
HT 1.850	110	110	-
HT 1.1000	150	110	-
HT 1.1200	170	-	80
HT 1.1500	280	-	120

WARNING

To guarantee more operating insurance it is necessary to assure the flue pipes to the wall using the appropriate clamps.

12. MAKING THE ELECTRICAL CONNECTIONS


Electrical safety of the appliance is only guaranteed by correct grounding, in accordance with the rules in force.

Connect the boiler to a 230V monophasic + ground power supply by means of the three-pin cable supplied with it and make sure you connect polarities correctly.

Use a double-pole switch with a contact separation of at least 3mm in both poles.

In case you replace the power supply cable fit a HAR H05 VV-F' 3x0.75mm² cable with an 8mm diameter max.

IMPORTANT: Check that the overall current drawn by accessories connected to the appliance is less than 2 A. If the value is greater, a relay must be wired between the boiler control circuit board and the accessories drawing the higher current.

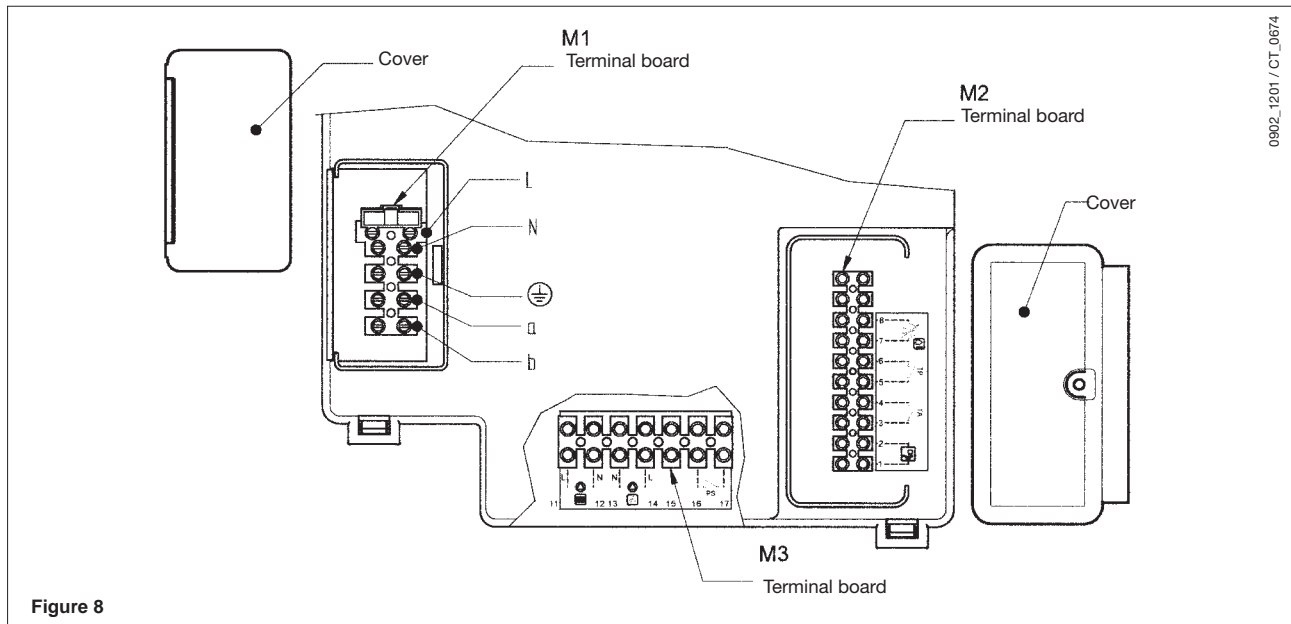

CAUTION

If the appliance is directly connected to a underfloor system, install a safety thermostat to prevent the latter from overheating.

12.1 TERMINAL BLOCKS ACCESS

- Cut off power to the boiler with the two-pole switch.
- Remove the top fascia panel cover (which is held by magnets).
- Unscrew the two screws holding the fascia panel in place.
- Swing the fascia panel forwards.

Main terminal block M1

- Remove the clip-on cover from terminal strip M1.
- The main terminal block incorporates a fast blow 3.15 A fuse (figure 8). Remove the black fuse holder to check and/or replace the fuse.

Terminal block M2


- Unscrew the fixing screw and remove the cover from terminal block M2.

Terminal block M3

- Unscrew the fixing screws and remove the main cover.

12.2 CONNECTING THE PUMPS

The pumps of the heating system (P1 and P2) have to be connected to boiler terminal block following the wiring of figure 9, a relay must be wired between the boiler control circuit board and the pumps.

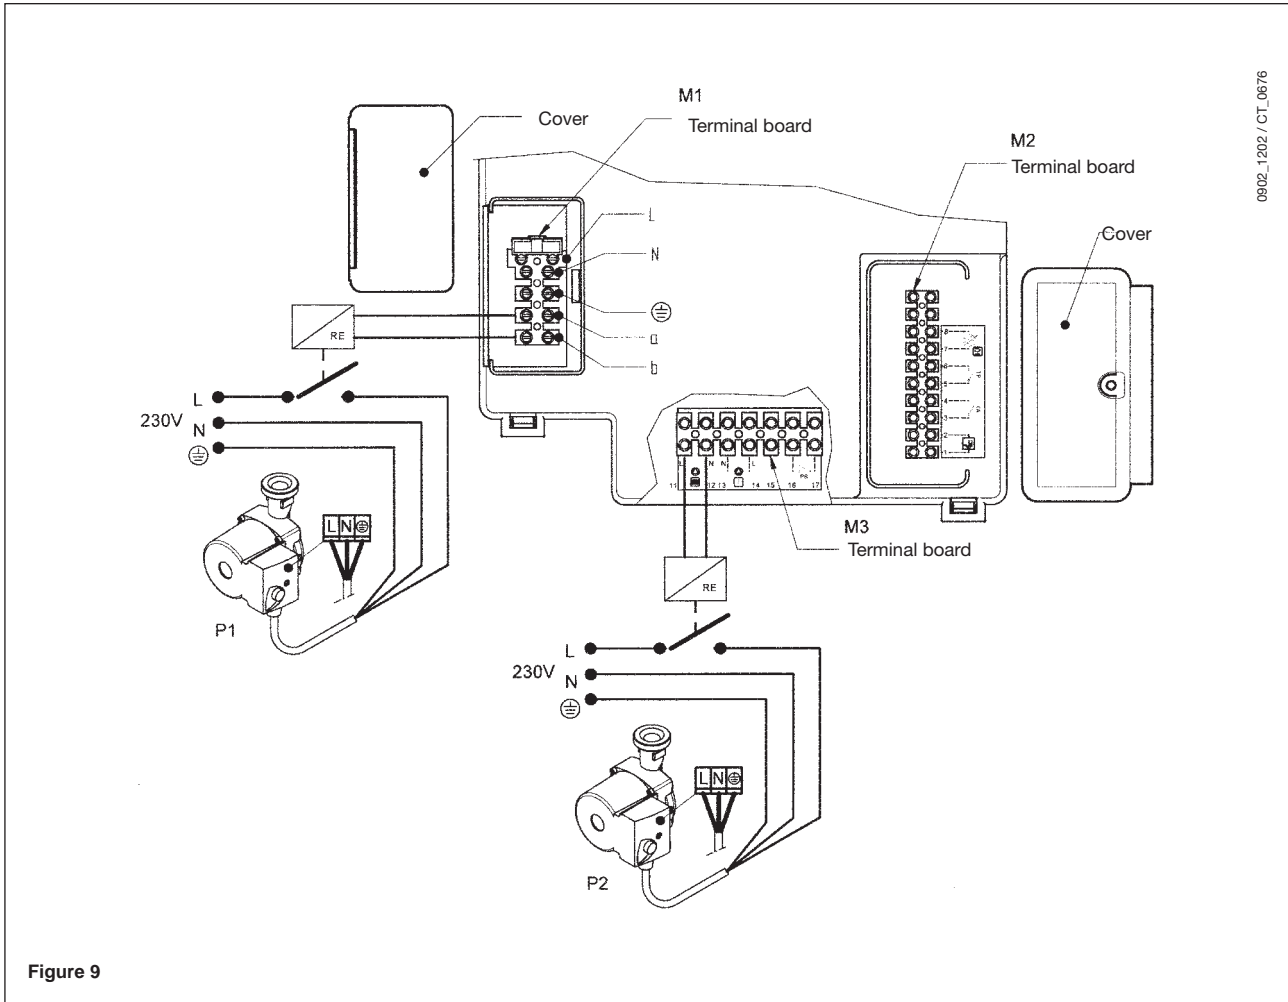

12.3 DESCRIPTION OF THE ELECTRICAL CONNECTIONS TO THE BOILER

Turn the control box downward to access terminal blocks M1 and M2 used for the electrical connections by removing the two protective covers (see figure 8).

Terminals 1-2: connections for the optional SIEMENS QAA73 temperature regulator. These connections do not have any specific polarity.

Remove the bridge between terminals 1-2 "TA" on terminal block M1.

Read the instructions provided with the temperature regulator to ensure correct installation and programming.

Terminals 3-4: room temperature thermostat "TA". Thermostats with integral accelerator resistor must not be used. Check that there is no voltage across the ends of the two thermostat connection wires.

Terminals 5-6: floor temperature thermostat connection "TP" (commercially available device). Check that there is no voltage across the ends of the two thermostat connection wires.

Terminals 7-8: connections for the optional SIEMENS QAC34 outdoor temperature sensor. Read the instructions provided with the outdoor temperature sensor to ensure correct installation.

Terminals 9-10: connections for the optional domestic hot water priority sensor, for connecting single system boilers to external DHW boilers.

Terminals a-b (230V AC; 50 Hz; 0,5 A max; $\cos \varphi > 0,8$): electricity supply for boiler pump. (Feeding relay coil).

12.4 CONNECTING THE QAA73 TEMPERATURE REGULATOR

The SIEMENS model QAA73 temperature regulator (optional accessory) must be connected to terminals 1-2 of terminal block M2 in figure 8.

The jumper across terminals 3-4, provided for connection of a room temperature thermostat, must be removed.

The settings of the domestic hot water temperature and domestic hot water production schedule must be made using this device.

The timed program of the central heating circuit must be set on the QAA73 if there is a single zone, or in relation to the zone controlled by the QAA73 device.

The timed program for the central heating circuit of the other zones can be set directly on the boiler control panel.

See the instructions provided with the QAA73 temperature regulator for the user parameter programming procedure.

QAA73: parameters which can be set by the installer (service)

By pressing the two PROG buttons together for at least three seconds it is possible to access the list of parameters that the installer can display and/or set.

Press either of these buttons to change the parameter to display or change.

Press the [+] or [-] key to change the value displayed.


Press either of the PROG buttons again to save the change.

Press the information button (i) to quit programming.

Here follows a list of the most commonly used parameters:

Line no.	Parameter	Range	Default value
70	HC1 gradient Selection of central heating circuit temperature curve "kt"	2.5...40	15
72	HC1 max. output Central heating system maximum output temperature	25...85	85
74	Type of building	Light, Heavy	Light
75	Room compensation Activation/deactivation of the influence of the room temperature. If it is deactivated, the outdoor temperature sensor must be installed.	on HC1 on HC2 on HC1+HC2 nil	On HC1
77	Automatic adaptation of the temperature curve "kt" in relation to the room temperature.	On - off	On
78	Opt Start Max Maximum time the boiler is switched on ahead of the timed program to optimise the temperature in the premises.	0...360 min	0
79	Opt Stop Max Maximum time the boiler is switched off ahead of the timed program to optimise the temperature in the premises.	0...360 min	0
80	HC2 gradient	2.5...40 -.- = not active	-.-
90	DHW Red Setp Minimum temperature of the domestic domestic hot water	10...58	10
91	DHW program Selection of the type of timed program for domestic hot water. 24 h/day = always on PROG HC-1h = as HC1 central heating program less one hour PROG HC = as central heating program PROG ACS = specific domestic hot water program (see also program lines 30-36)	24 h/day TSP HC-1h TSP HC TSP DHW	24 h/day

- fault messages

In the event of fault, the display panel on the QAA73 shows the flashing symbol . Press the information key (i) to display the error code and a description of the fault (see table on paragraph 3.9).

12.5 CONNECTING THE OUTDOOR TEMPERATURE SENSOR PROBE




The SIEMENS model QAC34 outdoor temperature sensor probe (optional accessory) must be connected to terminals 7-8 of terminal board M2 in figure 8.

The procedures for setting the gradient of the temperature curve “kt” vary depending on the accessories connected to the boiler.


a) Without QAA73 room temperature regulator:

The temperature curve “kt” must be selected by setting parameter H532 as described in section 14 “setting the boiler parameters”.

See graph 1 for selecting the curve referred to a room temperature of 20°C.

The chosen curve can be shifted by pressing the  (2), button (2) on the boiler control panel, and modifying the value displayed by pressing the  and  keys. See graph 2 for curve selection. (The example show in graph 3 refers to the curve Kt=15.

Increase the value displayed if the room temperature required is not reached inside the premises for central heating.

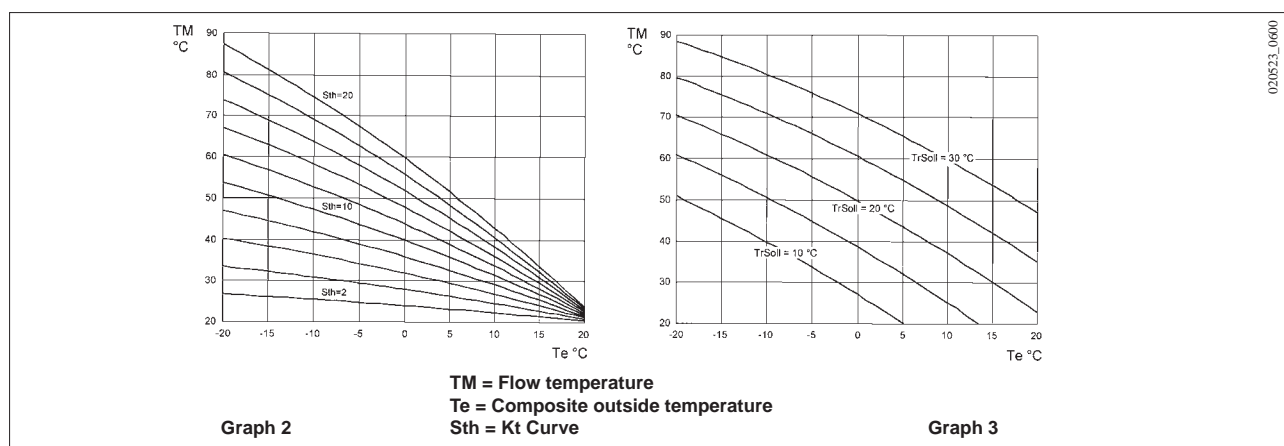


b) with QAA73 room temperature regulator:

The temperature curve “kt” must be selected by setting parameter 70 “HC1 curve” of the QAA73 room temperature control device as described in section 12.4 “QAA73: parameters which can be set by the installation (service) engineer”.

See graph 4 for selecting the curve referred to a room temperature of 20°C.

The curve is shifted automatically on the basis of the room temperature set using the QAA73 climate control. If the system is divided into zones, the temperature curve “kt” relating to the part of the system not controlled by the QAA73 must be selected by setting parameter H532 as described in section 17 “setting the boiler parameters”.

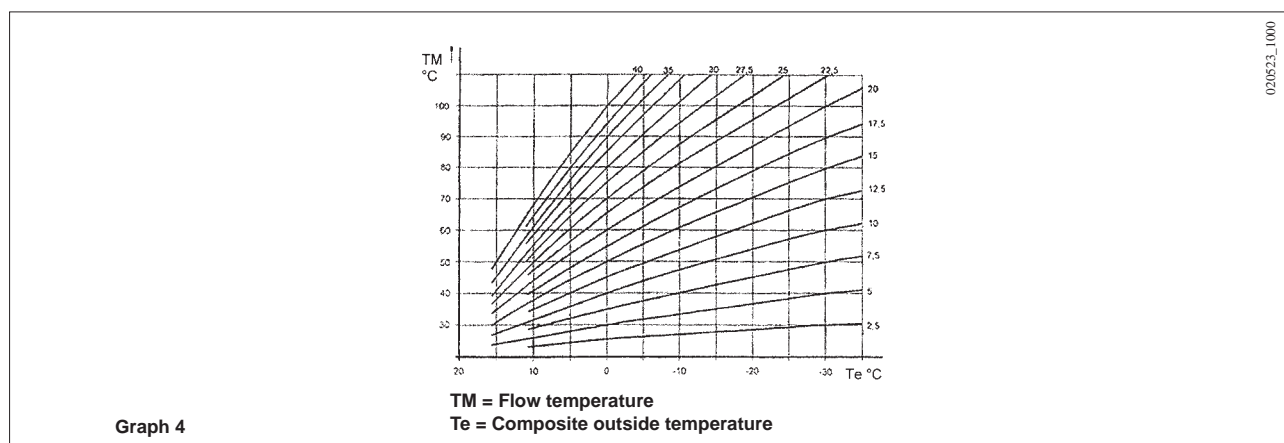

c) with AGU2.500 for control of a low temperature system:

Refer to the instructions provided with the AGU2.500 accessories for connection and control of a low temperature zone.

In this case some electronic parameters must be modified (see §14) (H552-H553-H632).

12.6 CONNECTING A ZONE SYSTEM

The electrical connection and settings needed to control a system divided into zones vary depending on the accessories connected to the boiler.

a) Without QAA73 room temperature control device:

The contact relating to the request for operation of the various zones must be parallel-connected and connected to terminal 3-4 “TA” of terminal block M2 in figure 10. The jumper present must be removed.

The central heating temperature is selected directly on the boiler control panel in accordance with the instructions provided for the user in this manual.

b) with QAA73 room temperature control device:

The pump relating to the room controlled by the QAA73 temperature control device must be supplied with electricity by means of terminals 11-12 of terminal block M3 in figure 10.


The contact relating to the request for operation of the other zones must be parallel-connected and connected to terminal 3-4 “TA” of terminal block M2 in figure 10. The jumper present must be removed.

The central heating temperature of the zone controlled by the QAA73 is set automatically by the QAA73 itself.

The central heating temperature of the other zones must be selected directly on the boiler control panel.

In this case some electronic parameters must be modified:

H552 = 50, H632 = 00001111.

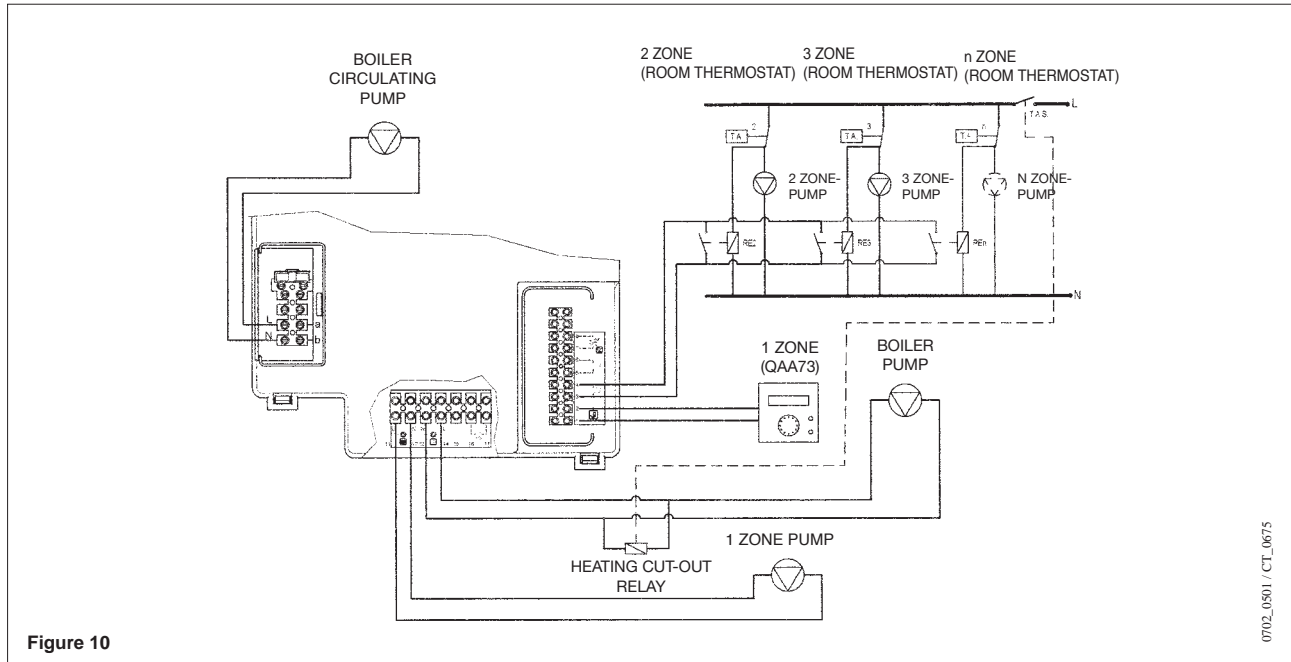

c) with AGU2.500 for control of a low temperature system:

Refer to the instructions provided with the AGU2.500 accessories for connection and control of a low temperature zone.

In this case some electronic parameters must be modified (see §14) (H552-H553-H632).

12.7 DOMESTIC HOT WATER CIRCUIT ELECTRIC PUMP CONNECTIONS

Fit the hot water tank after the hydraulic header.

Connect the pump of the external DHW boiler to terminals 13-14 on terminal block M3 (figure 9).

Make sure that the pump has the following specifications:


230 V AC; 50 Hz; 1 A max; $\cos \varphi > 0.8$.

If the specifications of the installed pump are different, a relay must be wired between the boiler control circuit board and the pump.

Remove the resistor from terminals 9-10 of terminal block M2 (figure 11), and connect the domestic hot water priority NTC sensor, which is supplied as an accessory.

The sensing element of the NTC device must be located in the pocket provided on the storage tank (figure 11).

The temperature and on-off programming of the domestic hot water supply are selected directly from the boiler control panel, as described in this manual under the user instruction headings.

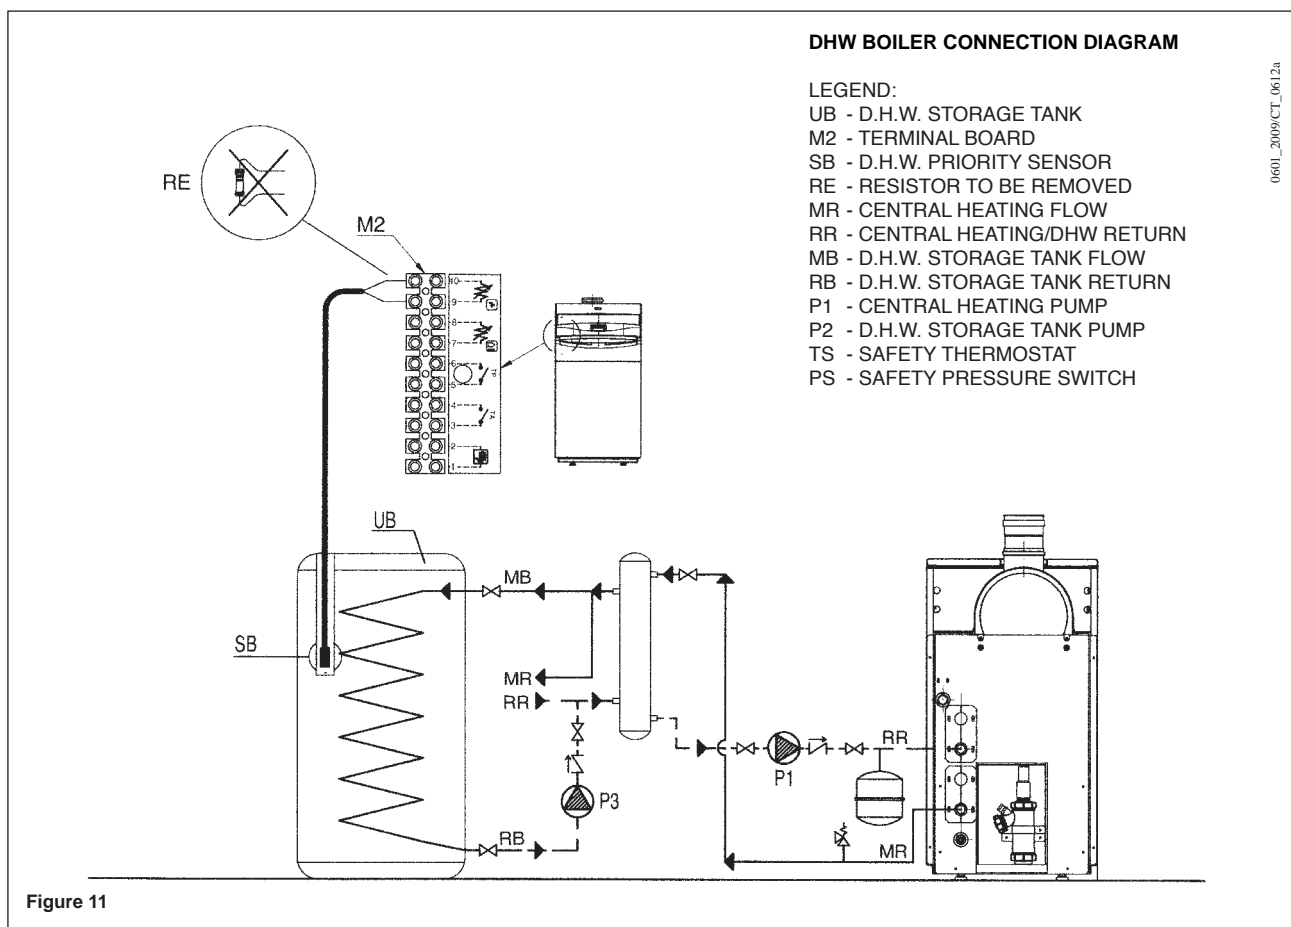

If the installation is divided into zones, a relay has to be de-activated to switch off power to the zone pumps, as shown in the diagram in figure 10.

13. ADJUSTING THE GAS VALVES

POWER HT models 1. 850 and 1.1000 have a single gas valve (figure 12 a).
 POWER HT models 1. 1200 and 1.1500 have a double gas valve (figure 12 b).

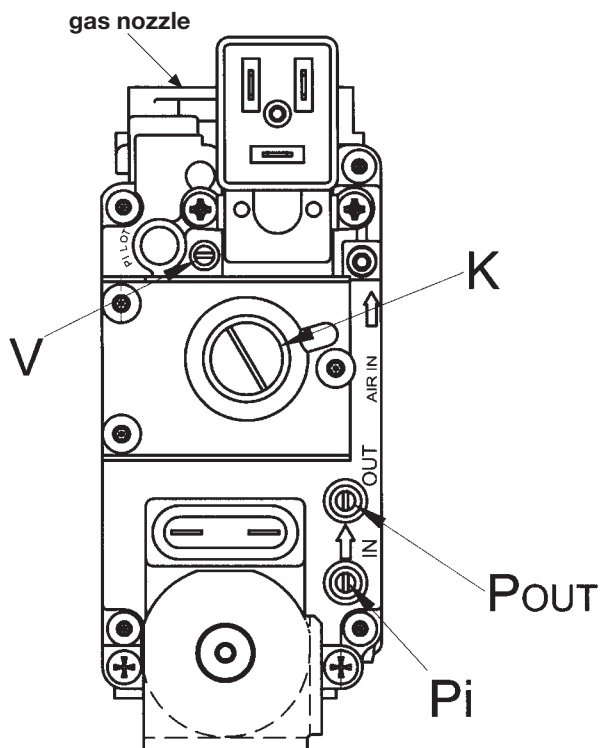


Figure 12a

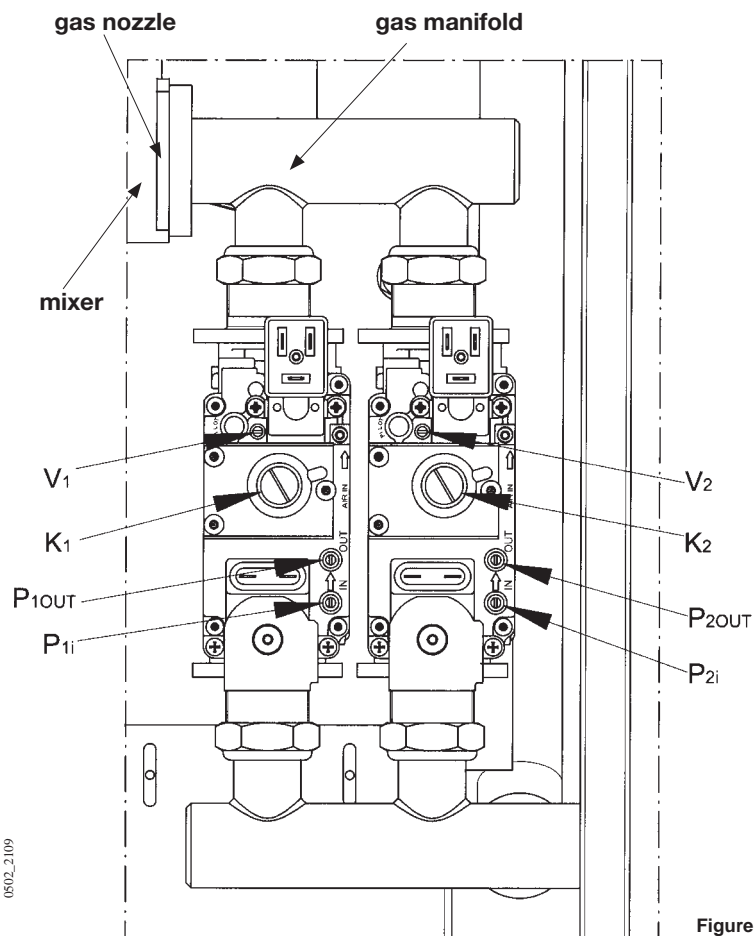





Figure 12b

LEGEND:


- Pi:** Gas supply pressure connection point
- P out:** Pressure connection point for measurement of the OFFSET
- V:** Gas flow adjuster screw
- K:** OFFSET adjuster screw

13.1 SINGLE GAS VALVE MODELS (POWER HT 1.850 AND 1.1000) FIGURE 12a

Proceed as follows to adjust the single gas valve:




- Insert the fume analysis probe into the fume sampling hole as instructed in section 17 (figure 15).
- Switch on the boiler, activating the “setting function” from the control panel by pressing and holding the  and  keys simultaneously until the ► symbols are displayed, positioned as illustrated in figures 13a and 13b.
- Press the  key to set the maximum heat output, with the display showing 100% (figure 13a).

Caution: in the event of the boiler failing to ignite, or when replacing the gas valve, the recommended procedure is to tighten the adjuster screw (V) fully and then back off 3 turns, repeating the steps described above.


- Turn the gas valve adjuster screw **V** so as to set the CO₂ values as indicated in table 2.1 for natural gas (G20) and in table 2.2 for propane (LPG):
 - Turn the screw anti-clockwise to increase the CO₂ level.
 - Turn the screw clockwise to decrease the CO₂ level.
- Press the  key to set the minimum heat output, with the display showing 0% (figure 13b).
- Turn the gas valve adjuster screw **K** so as to set the CO₂ values as indicated in table 2.1 for natural gas (G20) and in table 2.2 for propane (LPG):
 - Turn the screw clockwise to increase the CO₂ level.
 - Turn the screw anti-clockwise to decrease the CO₂ level.

13.2 DOUBLE GAS VALVE MODELS (POWER HT 1.1200 AND 1.1500) FIGURE 12b

Proceed as follows to adjust the double gas valve:

- Connect a pressure gauge to the P1OUT pressure measurement hole on valve 1.
- Insert the probe of the flue gas analyzer in the sampling port as indicated in heading 17 - figure 15.
- Switch on the boiler, activating the “setting function” from the control panel by pressing and holding the  and  keys simultaneously until the ► symbols are displayed, positioned as illustrated in figures 13a and 13b.
- Press the  key to set the maximum heat output, with the display showing 100% (figure 13a).

Caution: in the event of the boiler failing to ignite, or when replacing the gas valves, the recommended procedure is to tighten the adjuster screws (V1) and (V2) fully and then, depending on the model, back off 2¼ turns (POWER HT 1.1200) or 2½ turns (POWER HT 1.1500), repeating the steps described above.

- Turn both gas valve adjuster screws (V1) and (V2) so as to set the CO₂ values as indicated in table 2.1 for natural gas (G20) and in table 2.2 for propane (LPG):
 - Turn the screw clockwise to decrease the CO₂ level.
 - Turn the screw anti-clockwise to increase the CO₂ level.
- Press the  key to set the minimum heat output, with the display showing 0% (figure 13b).
- Turn the adjuster screw K1 of gas valve 1 so as to set the pressure value (Pout) as indicated in table 2.1 for natural gas (G20) and in table 2.2 for propane (LPG):
 - c. Turn the screw clockwise to increase pressure (CO₂ increasing).
 - d. Turn the screw anti-clockwise to decrease pressure (CO₂ decreasing).

- Remove the pressure gauge from the P1OUT port and connect to the P2OUT port of gas valve 2.
- Turn the adjuster screw K2 of gas valve 2 so as to set the pressure value (Pout) as indicated in table 2.1 for natural gas (G20) and in table 2.2 for propane (LPG):
- Check that the CO₂ value at minimum heat output is as indicated in table 2.1 or 2.2. The value can be optimized by making the necessary fine adjustment to screw K2.

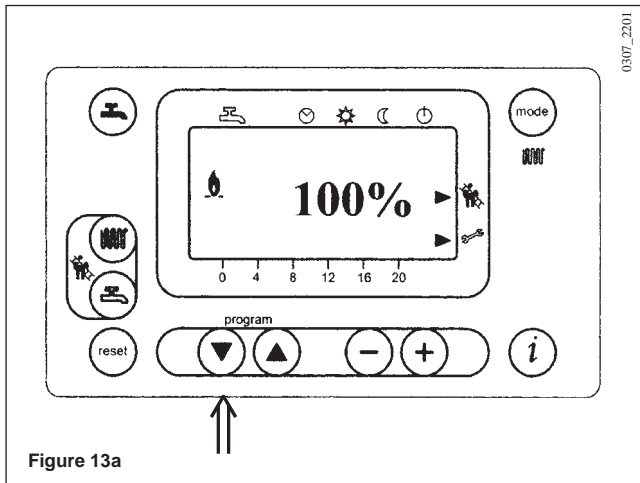


Figure 13a

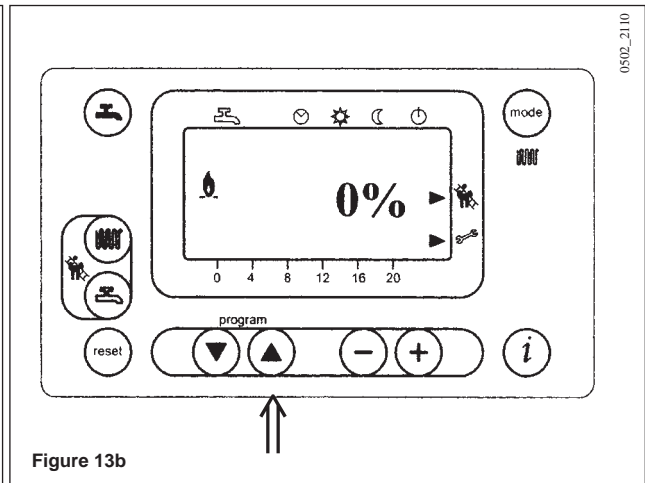


Figure 13b

13.3 GAS CONVERSION

IMPORTANT: in the event of converting the boiler from natural gas (G20) to propane (LPG), the following operation must be carried out before proceeding to adjust the gas valve as described above:

- For models with one valve, replace the diaphragm on the gas valve outlet (figure 12a).
To replace the diaphragm, disassemble the gas valve by undoing the inlet and outlet fittings, then unscrew the nozzle with a pair of straight round nose pliers.
Check the fluid-tightness of the gas fittings removed previously.
- For models with two gas valves, replace the diaphragm located at the venturi inlet (figure 12b).
To enable this operation, the gas valve manifold must first be removed.
Check the fluid-tightness of the gas fittings removed previously.
- Set parameters **H536 - H541 - H608 - H609 - H610 - H611 - H612 - H613** by way of the display on the control panel.

The values to be set are given in tables 2.1 and 2.2. The programming methods are described in chapter 14.

Gas consumption at 15 °C 1013 mbar Gas G20 - 2H - 20 mbar		POWER HT 1.850	POWER HT 1.1000	POWER HT 1.1200	POWER HT 1.1500
PCI	MJ/m ³	34,02	34,02	34,02	34,02
Consumption at max. heat output	m ³ /h	9,26	10,9	13,08	16,35
Consumption at min. heat output	m ³ /h	3,50	3,89	4,23	4,39
Gas nozzle	mm	11,5	12	11	11,5
CO ₂ max. heat output	%	8,7	8,7	8,7	8,7
CO ₂ min. heat output	%	8,6	8,6	8,4	8,4
Pout pressure at minimum power	Pa	-	-	-4	-5
Parameters H536-H613 (rpm) at maximum power		5100	5650	4650	6000
Parameters H541-H610 (pwm %) at maximum power		90	100	55	100
Parameter H612 (rpm) at minimum power		1900	2100	1600	1550
Parameter H609 (pwm) at minimum power		15	15	10	9,5
Parameter H611 (rpm) ignition load		3600	3600	2600	2900
Length of exhaust flue : 0 ÷ 10 m					
Parameter H608 (pwm) ignition load		30	30	15	15
Length of exhaust flue : 10 ÷ 20 m					
Parameter H608 (pwm) ignition load		40	40	20	20
Cascade solution with single clapet Ø 110/110					
Parameters H536-H613 (rpm) at maximum power		5500	6000	—	—
Parameter H612 (rpm) at minimum power		2200	2250	—	—
Parameter H609 (pwm) at minimum power		16,5	16	—	—
Parameter H608 (pwm) ignition load		40	40	—	—

Table 2.1

Gas consumption at 15 °C 1013 mbar Gas G31 - 3P - 37 mbar		POWER HT 1.850	POWER HT 1.1000	POWER HT 1.1200	POWER HT 1.1500
PCI	MJ/Kg	46,34	46,34	46,34	46,34
Consumption at max. heat output	Kg/h	6,77	7,97	9,56	11,95
Consumption at min. heat output	Kg/h	2,57	2,86	3,10	3,22
Gas nozzle	mm	7,8	7,8	7,8	7,8
CO ₂ max. heat output	%	10,2	10,2	10,2	10,2
CO ₂ bei min Heizleistung	%	9,3	9,8	10,2	10,2
Pout pressure at minimum power	Pa	-	-	-7	-8
Parameters H536-H613 (rpm) at maximum power		4600	5150	4300	5350
Parameters H541-H610 (pwm %) at maximum power		90	100	55	100
Parameter H612 (rpm) at minimum power		1900	1950	1450	1450
Parameter H609 (pwm) at minimum power		14,5	14,5	10	9,5
Parameter H611 (rpm) ignition load		4200	4200	2600	2900
Length of exhaust flue : 0 ÷ 10 m					
Parameter H608 (pwm) ignition load		40	40	15	15
Length of exhaust flue : 10 ÷ 20 m					
Parameter H608 (pwm) ignition load		50	50	20	20
Cascade solution with single clapet Ø 110/110					
Parameters H536-H613 (rpm) at maximum power		5000	5500	—	—
Parameter H612 (rpm) at minimum power		2200	2100	—	—
Parameter H609 (pwm) at minimum power		16,5	16	—	—
Parameter H608 (pwm) ignition load		50	50	—	—

Table 2.2

14. SETTING THE BOILER PARAMETERS

The boiler parameters may only be modified by professionally qualified staff proceeding as follows:

- press the ∇ \blacktriangle keys on the boiler's front panel together for about 3 s until the parameter H90 appears on the display;
- press the ∇ \blacktriangle keys to select the parameter for modification;
- press the \ominus and \oplus keys to modify the parameter;
- press the ⓘ key to exit the programming function.

The following are the parameters generally used:

Parameter N.	Description	Factory setting
H90	Minimum D.H.W. temperature setting (°C).	10
H91	D.H.W. activation program (0=active; 1=not active)	1
H505	Maximum temperature (°C) of the central heating circuit HC1 corresponding to: <ul style="list-style-type: none"> - the main circuit in systems with just one zone; - the circuit of the zone where the QAA73 room temperature control device is installed in case of systems with more than one high-temperature zone; - the high temperature zone circuit in mixed systems and if the SIEMENS AGU2.500 accessory is used. 	80
H507	Maximum temperature (°C) of the central heating circuit HC2 of a system with more than one zone, corresponding to the circuit of the low-temperature zone if the SIEMENS AGU2.500 accessory is used.	80
H516	Automatic Summer / Winter switching temperature (°C).	20
H532	Selection of temperature curve of central heating circuit HC1 (see Graph 1)	15
H533	Selection of temperature curve of central heating circuit HC2 (see Graph 1)	15
H608	PWM (%) Setting: Ignition load	See table 2
H611	Speed setting (rpm) : Ignition load	
H609	PWM Setting (%) : minimum power	
H541-H610	PWM Setting (%) : maximum power Central heating / Domestic hot water	
H612	Speed setting (rpm) : minimum power	
H536-H613	Speed setting (rpm) : maximum power Central heating / Domestic hot water	
H544	Pump post-circulation time in central heating mode (min)	3
H545	Burner operating pause time between two start-ups (s)	180
H552	Hydraulic system setting (see instructions provided with the SIEMENS AGU2.500 accessory) H552 = 50 with AGU2.500 and with QAA73 + zones with room thermostat H552 = 80 with RVA 47	2
H553	Configuration of heating circuits H553 = 12 with AGU2.500	21
H615	Programmable function:	9
H632	Configuration of system with supplementary pump H632 = 00001111 with AGU2.500 and with QAA73 + zones with room thermostat H632 = 00001111 with RVA 47 The value of Bit could be 1 or 0. Press the keys 5 and 6 to select the bit to modify (b0 is the bit on the right, b7 is the last bit on the left). To modify the Bit value press on the keys 7 and 8	00001100
H641	Fan overrun time setting (s)	10
H657	Setpoint of autonomous ANTILEGIONELLA function 60...80 °C = setting temperature range 0 = function inactive	0

If the electronic circuit board is replaced, make sure that the parameters set are those specific to the boiler model, as indicated in the documentation available from the authorised Service Centre.

15. CONTROL AND OPERATION DEVICES

The boiler has been designed in full compliance with European reference standards and in particular is equipped with the following:

- **Overheat safety thermostat**
Thanks to a sensor placed on the heating flow, this thermostat interrupts the gas flow to the main burner in case the water contained in the circuit has overheated. Under these conditions the boiler locks out and you can only repeat the ignition procedure by pressing the reset button on the boiler after you have remedied the cause of the trip.


It is strictly forbidden to disable this safety device.

- **Flue thermostat**
This device, positioned on the flue inside the boiler, interrupts the flow of gas to the burner if the temperature exceeds 90 °C. After verifying the cause of the trip, press the reset button positioned on the thermostat itself, then press the release button on the boiler.

It is forbidden to disenable this safety device

- **Flame ionization detector**
The flame sensing electrode guarantees safety of operation in case of gas failure or incomplete interlighting of the main burner.
Under such conditions the boiler is locked out.
You must press the reset button on the boiler to restore the normal operating conditions.
- **Pump overrun**
The electronic control system keeps the pump operating for 3 minutes in central heating mode after the room temperature thermostat has switched off the main burner.
- **Frost protection device**
Boilers electronic management includes a “frost protection” function in the central heating system which operates the burner to reach a heating flow temperature of 30°C when the system heating flow temperature drops below 5 °C.
This function is enabled as long as the boiler is connected to the a.c. power and gas supplies and the pressure in the system is as specified.
- **Pump-blocking prevention**
In case there is no call for heat either from the central heating system or from the DHW system for 24 hours on end the pump will automatically switch on for 10 seconds.
- **Hydraulic pressure sensor**
This device enables the main burner only to be switched on if the system pressure is over 0.5 bar.

16. POSITIONING OF THE IGNITION AND FLAME SENSING ELECTRODE

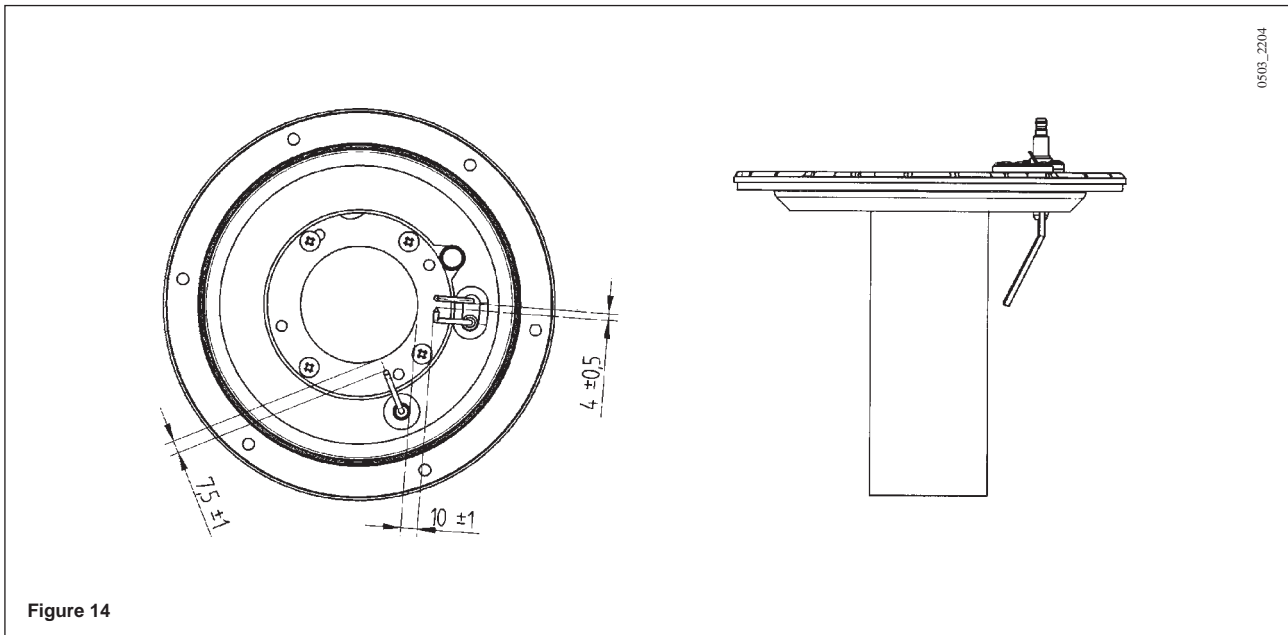


17. CHECK OF COMBUSTION PARAMETERS

Drill a hole in the flue at a distance from the boiler equivalent to twice the diameter of the flue to measure combustion efficiency and combustion flue composition in accordance with the rules in force. Use this hole to measure the following parameters:




 
 
- Combustion flue temperature
- Oxygen (O₂) or carbon dioxide (CO₂) concentration.
- Carbon monoxide (CO) concentration.

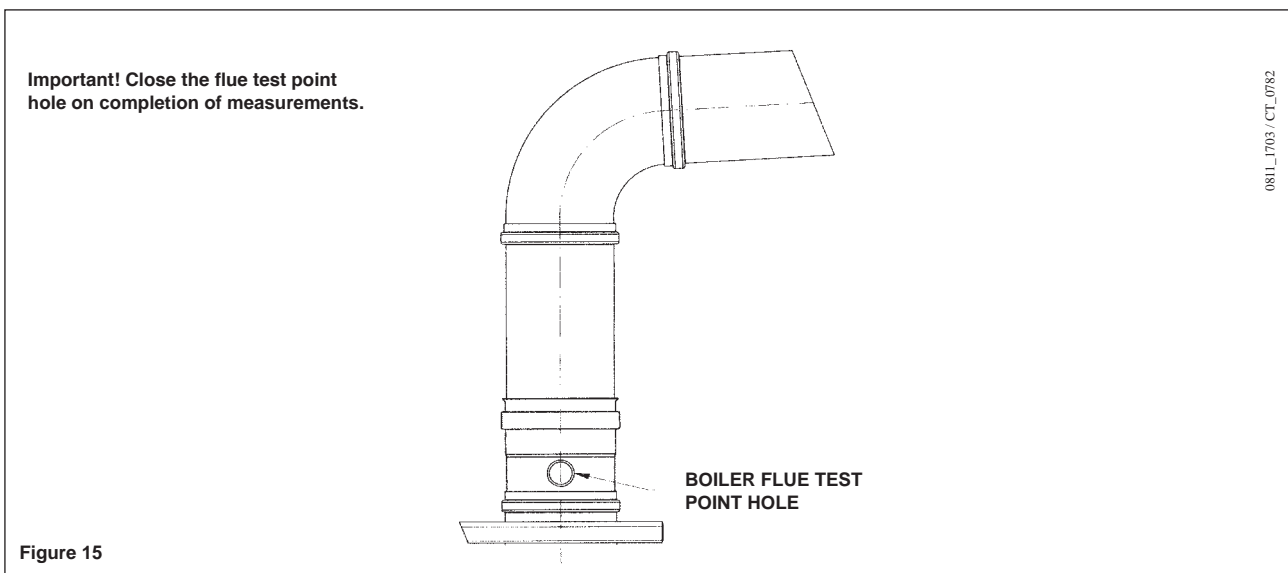
Measure the temperature of combustion air near the air inlet to the boiler. The necessary hole must be made by the technician responsible for the heating system when the system is first started up, and must then be closed to ensure that the flue remains properly sealed during normal operation.



18. ACTIVATING THE CHIMNEY SWEEP FUNCTION

To facilitate measurement of the combustion efficiency and improve the cleanliness of the production products, the chimney sweep function can be activated by proceeding as described below:

- 1) press the   (2-3) together until the pointer "►" appears on the display alongside the  symbol (about 3 seconds but no more than 6 seconds). In these conditions, the boiler operates at the maximum heat output in central heating mode.
- 2) press either of the   buttons to exit the function

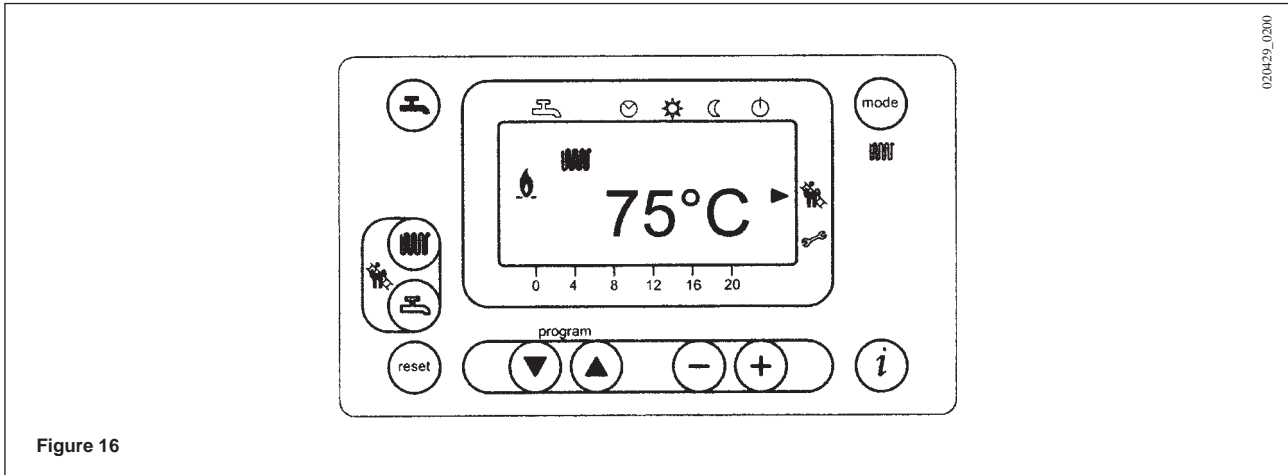

19. ANNUAL SERVICE

To ensure the boiler operates at peak efficiency, the following checks must be performed every year:

- check on the appearance and tightness of the gas and combustion circuit gaskets;
- check on the condition and position of the ignition and flame sensing electrodes (see section 16);
- check on the condition of the burner and its fixing to the aluminium flange;
- check for any dirt in the combustion chamber. Use a vacuum-cleaner for this cleaning operation;
- check that the gas valve is calibrated correctly (see section 13);
- check that there is no dirt in the siphon;
- check on the central heating system pressure;
- check on the expansion vessel pressure.

20. BOILER SCHEMATIC

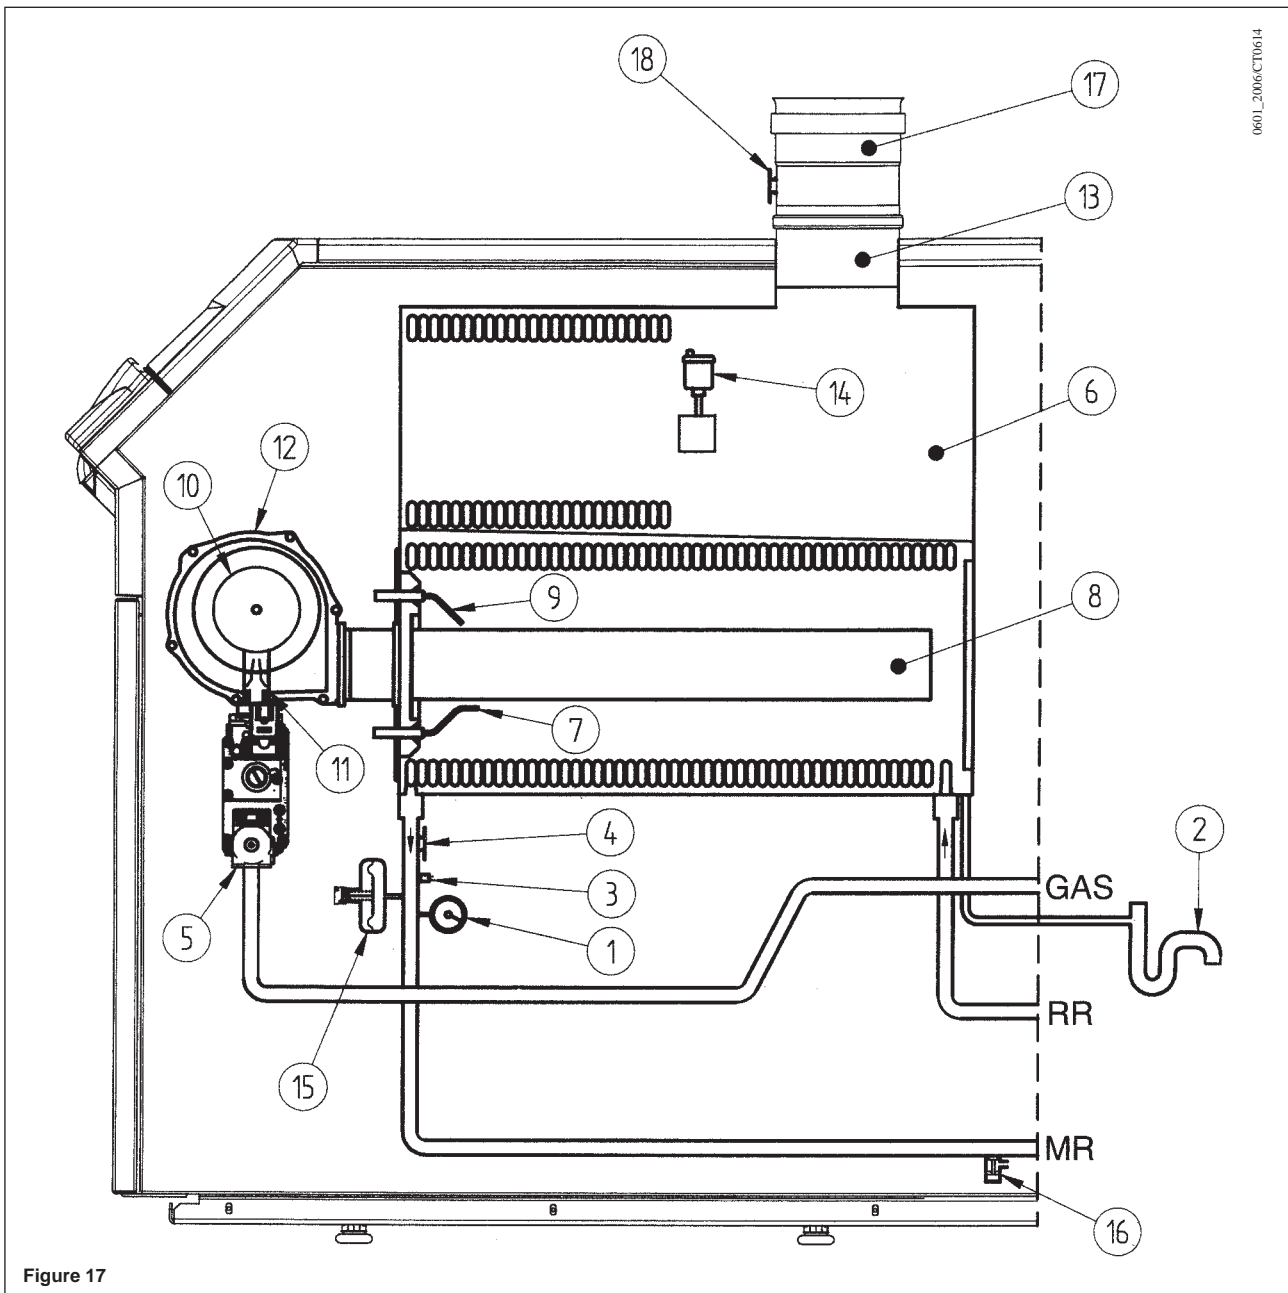



Figure 17

Key:

- 1 pressure gauge
- 2 siphon
- 3 central heating NTC sensor
- 4 105°C overheat safety thermostat
- 5 gas valve
- 6 flue-water exchanger
- 7 flame detector electrode
- 8 burner
- 9 ignition electrode
- 10 mixer with venturi
- 11 gas diaphragm
- 12 fan
- 13 flue joint
- 14 automatic air vent
- 15 hydraulic pressure sensor
- 16 boiler drain point
- 17 joint flue with flue thermostat
- 18 flue thermostat


21. ILLUSTRATED WIRING DIAGRAM

21.1 POWER HT 1.850 - 1.1000

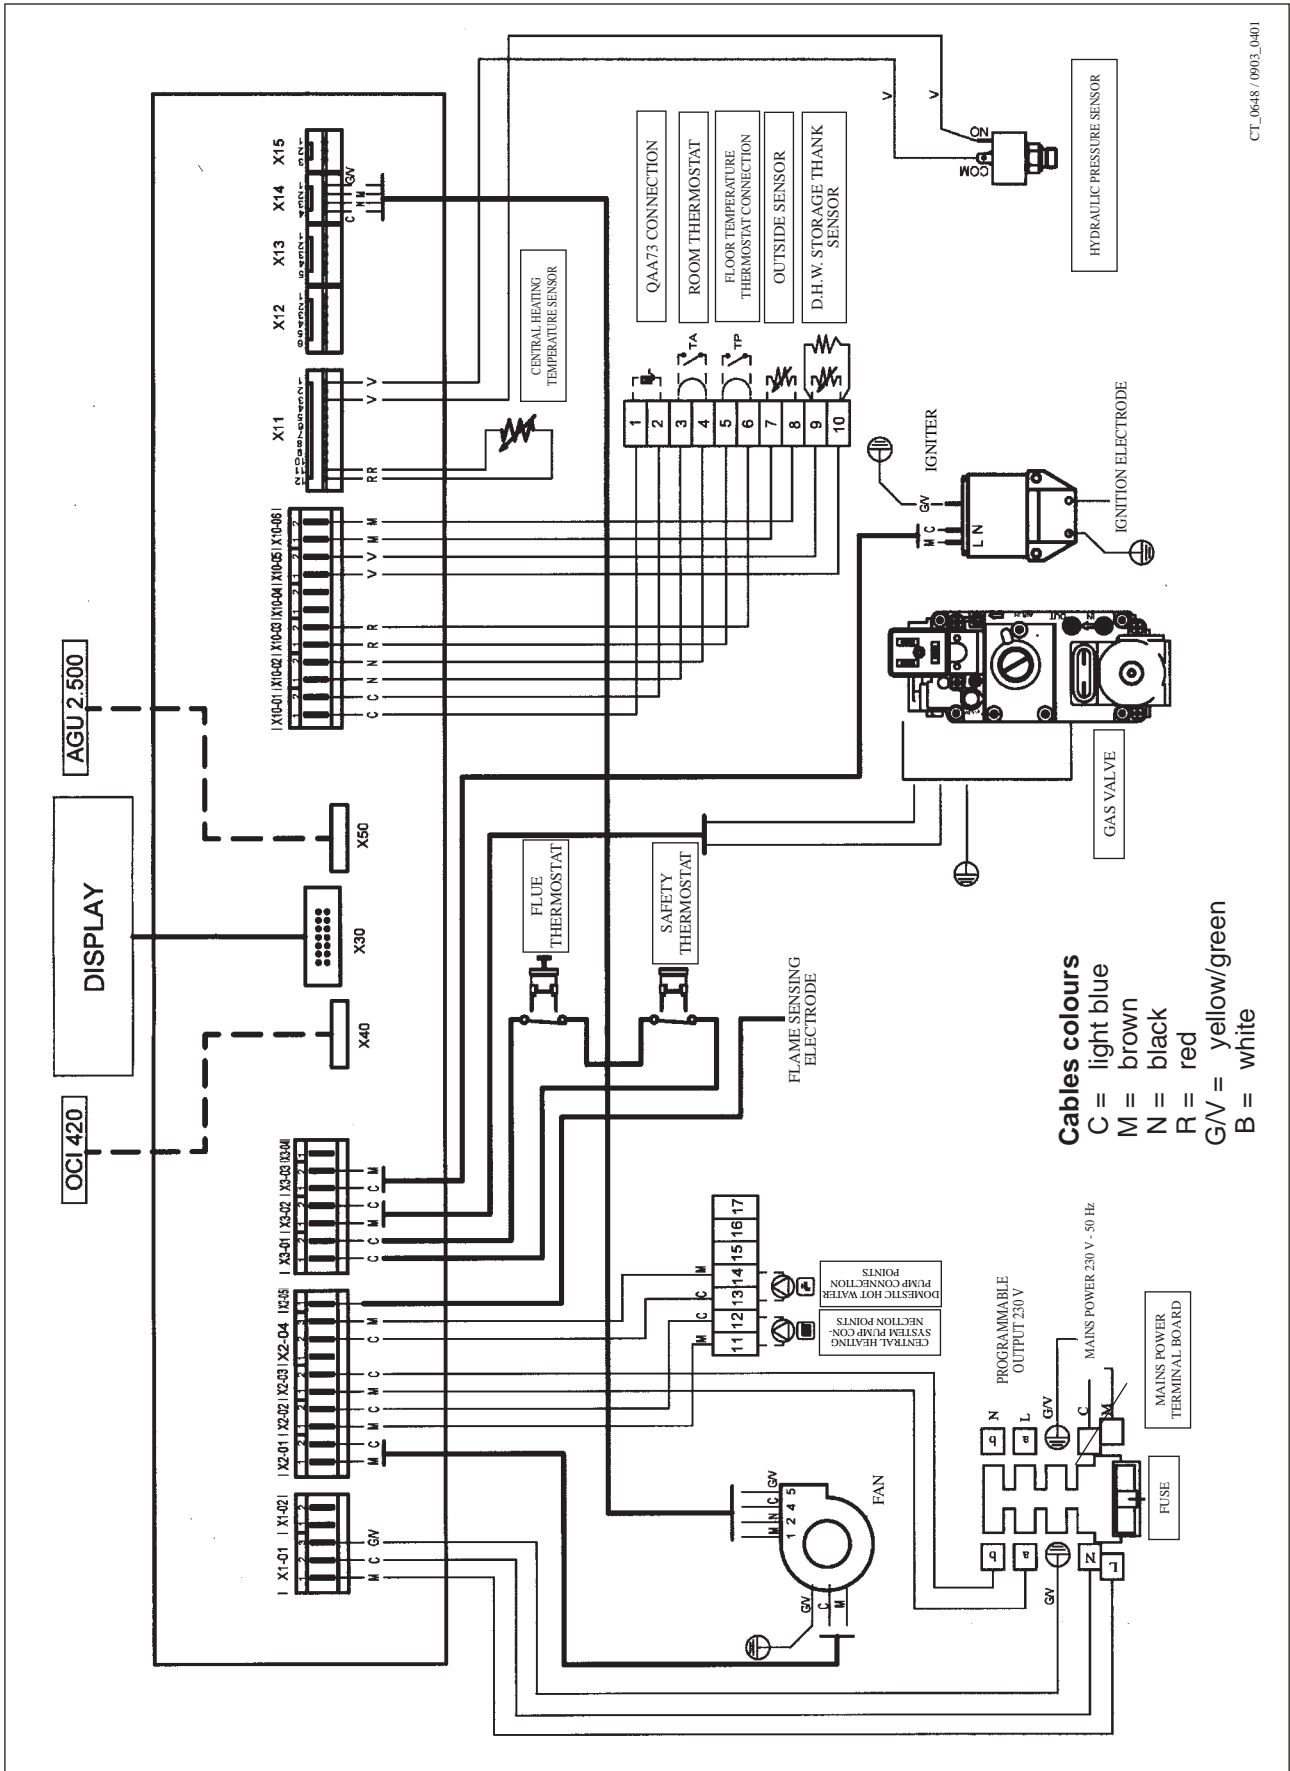

CT_0648 / 0903_0401

21.2 POWER HT 1.1200 - 1.1500

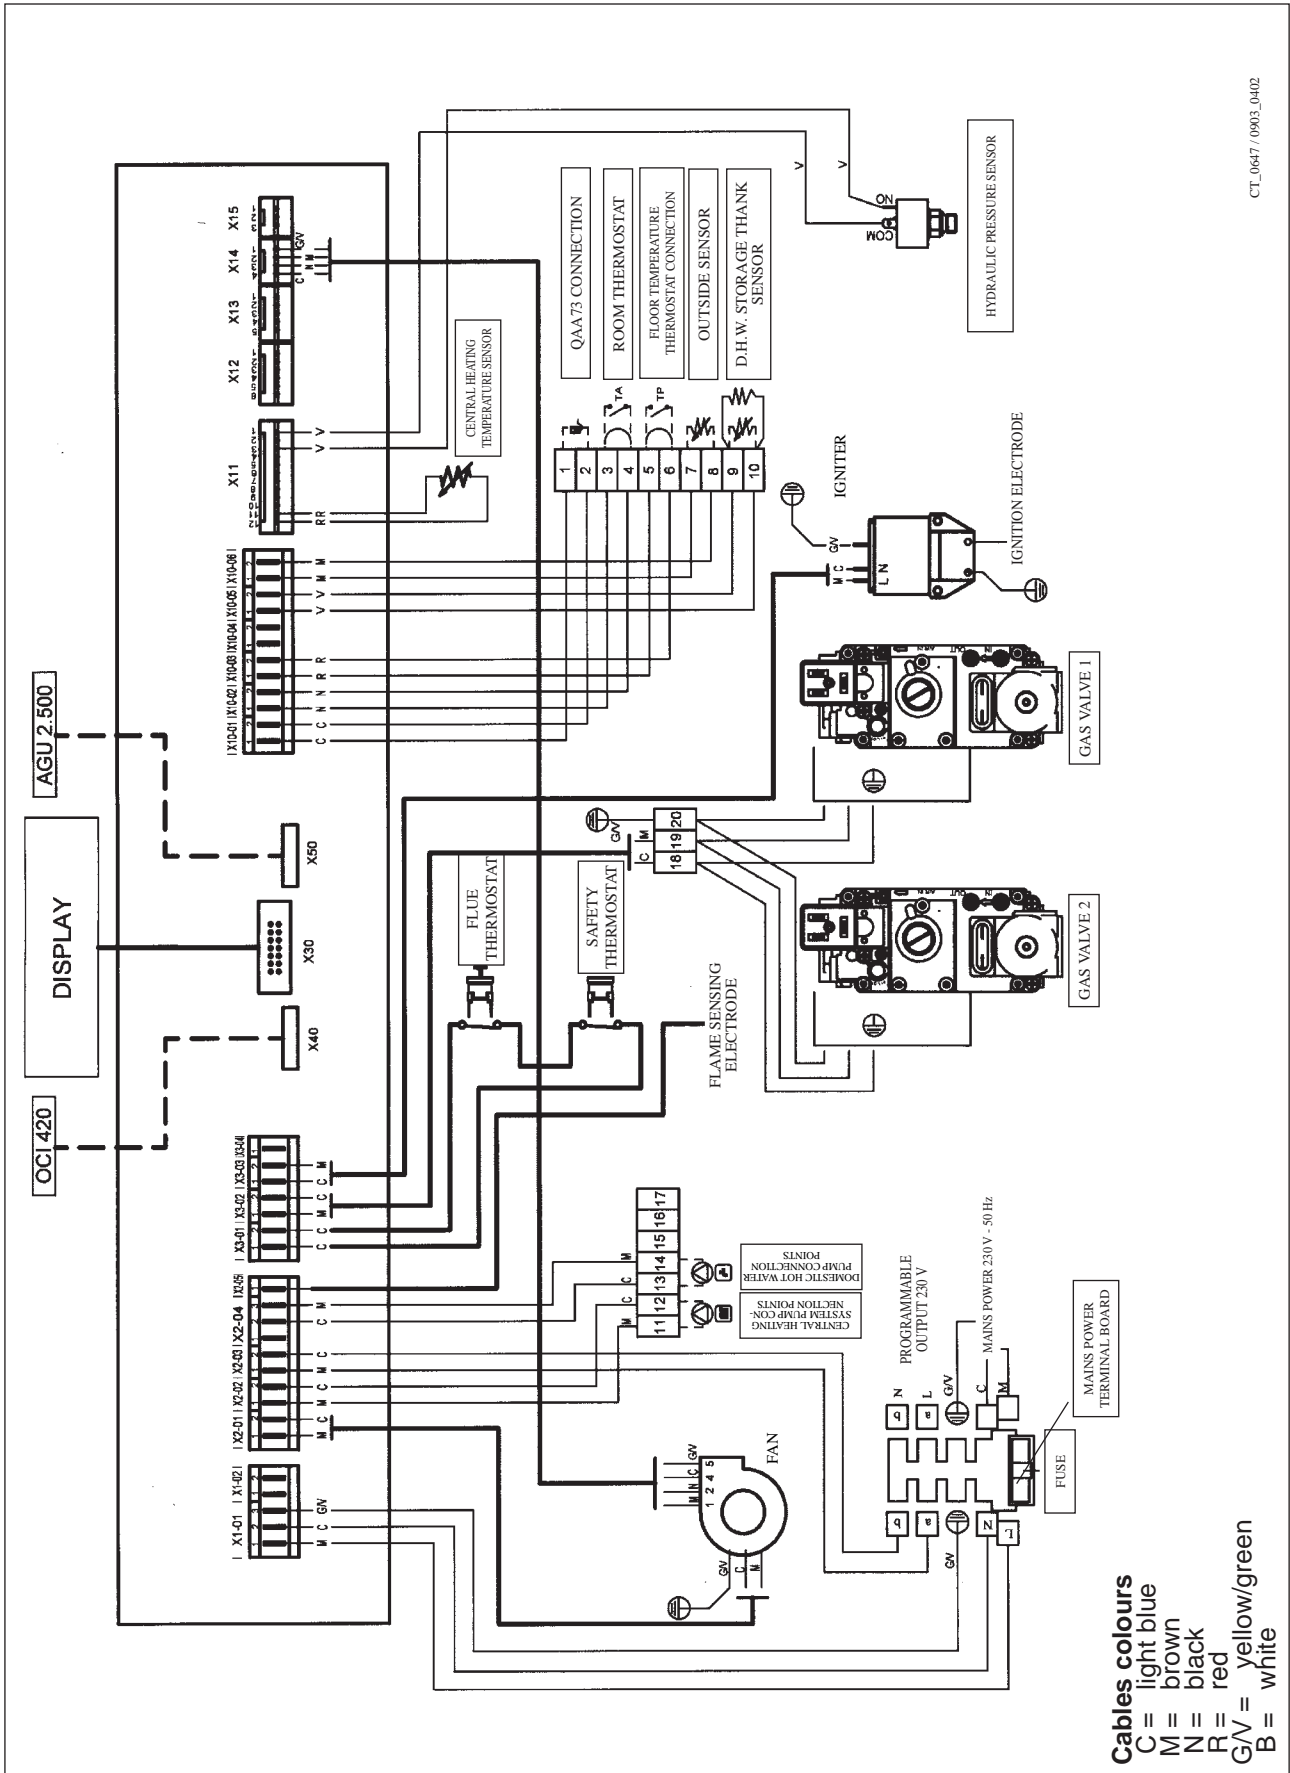

CT_0647 / 0903_0402

22. TECHNICAL DATA

Boiler model POWER HT		1.850	1.1000	1.1200	1.1500
Category		II _{2H3P}	II _{2H3P}	II _{2H3P}	II _{2H3P}
Maximum heat input	kW	87,2	102,7	123,2	154
Minimum heat input	kW	33,1	36,8	40	41,5
Maximum heat output 75/60°C	kW	85	100	120	150
	kcal/h	73100	86000	103200	129000
Maximum heat output 50/30°C	kW	91,6	107,8	129,7	162
	kcal/h	78776	92708	111542	139320
Minimum heat output 75/60°C	kW	32,2	35,8	39	40,4
	kcal/h	27692	30788	33540	34744
Minimum heat output 50/30°C	kW	34,9	38,8	42,1	43,7
	kcal/h	30014	33368	36206	37582
Useful efficiency according to 92/42/CEE directive	—	★★★★	★★★★	★★★★	★★★★
Central heating system max. pressure	bar	4	4	4	4
Heating circuit temperature range	°C	25÷80	25÷80	25÷80	25÷80
Type	—	B23	B23	B23	B23
Flue duct diameter	mm	100	100	100	100
Max. flue mass flow rate	kg/s	0,041	0,049	0,059	0,073
Min. flue mass flow rate.	kg/s	0,016	0,018	0,019	0,020
Max. flue temperature	°C	78	80	77	75
NOx class	—	5	5	5	5
Type of gas used	—	G20	G20	G20	G20
		G31	G31	G31	G31
Natural gas feeding pressure 2H	mbar	20	20	20	20
Propane gas feeding pressure 3P	mbar	37	37	37	37
Power supply voltage	V	230	230	230	230
Power supply frequency	Hz	50	50	50	50
Rated power supply	W	100	160	135	235
Net weight	kg	75	83	95	103
Dimensions	height	mm	850	850	850
	width	mm	450	450	450
	depth	mm	801	871	1024

BAXI S.p.A., nella costante azione di miglioramento dei prodotti, si riserva la possibilità di modificare i dati espressi in questa documentazione in qualsiasi momento e senza preavviso. La presente documentazione è un supporto informativo e non considerabile come contratto nei confronti di terzi.

Die Firma **BAXI S.p.A.** befaßt sich ständig mit der Verbesserung ihrer Produkte und behält sich daher das Recht vor, die in diesen Unterlagen enthaltenen Daten jederzeit und ohne Vorankündigung zu ändern. Diese Unterlagen sind rein informativ und gelten nicht als Vertrag gegenüber Dritte.

BAXI S.p.A., in its commitment to constantly improve its products, reserves the right to alter the specifications contained herein at any time and without previous warning. These Instructions are only meant to provide consumers with use information and under no circumstance should they be construed as a contract with a third party.

BAXI S.p.A.

36061 BASSANO DEL GRAPPA (VI) ITALIA
Via Trozzetti, 20
Tel. 0424 - 517111
Telefax 0424/38089